



**WORLD  
SAILING**

**EQUIPMENT RULES OF SAILING**

**2017 - 2020**

Contact Details for the World Sailing Executive Office:

Ariadne House  
Town Quay  
Southampton  
Hampshire SO14 2AQ  
UK

**Tel** +44 (0)23 80 635111

**Fax** +44 (0)23 80 635789

**Email** [office@sailing.org](mailto:office@sailing.org)

[www.sailing.org](http://www.sailing.org)

Published by World Sailing (UK) Ltd, Southampton, UK  
© World Sailing (IOM) Ltd.

---

**THE  
EQUIPMENT RULES  
OF  
SAILING**

**for 2017-2020**

**World Sailing**

As the leading authority for the sport, World Sailing promotes and supports the protection of the environment in all sailing competition and related activities throughout the world.

# CONTENTS

---

Introduction .....	4
<b>Part 1 – Use of Equipment</b>	
Section A – During an Event .....	6
Section B – While Racing .....	7
<b>Part 2 – Definitions</b>	
Section C – General Definitions .....	8
Section D – Hull Definitions .....	13
Section E – Hull Appendage Definitions .....	14
Section F – Rig Definitions .....	16
Section G – Sail Definitions .....	27
Subsection A – Trilateral Sails .....	27
Subsection B – Additions for Other Sails .....	38
<b>Part 3 – Rules Governing Equipment Control and Inspection</b>	
Section H – Equipment Control and Inspection .....	40
<b>Appendix 1</b>	
Racing Rules that govern the use of equipment .....	44
<b>Appendix 2</b>	
Abbreviations for primary sail dimensions .....	45
Index of Defined Terms .....	46



# INTRODUCTION

---

The *Equipment Rules of Sailing* includes and references:

- Rules for use of equipment.
- Definitions of equipment, measurement points and measurements for use in **class rules** and other rules and regulations.
- Rules governing **certification control** and **equipment inspection**.

## Applicability

The ERS are *rules* only if they are invoked by:

- (a) **Class Rules**.
- (b) Adoption in the notice of race and sailing instructions.
- (c) Prescriptions of an MNA for races under its jurisdiction.
- (d) World Sailing Regulations, or
- (e) Other documents that govern an event.

## Terminology

A term used in its defined sense is printed in “**bold**” if defined in the ERS and in “*italic*” if defined in the RRS. Other words and terms are used in the sense ordinarily understood in nautical or general use in English.

## Abbreviations

MNA	World Sailing Member National Authority
ICA	International Class Association
NCA	National Class Association
ERS	The Equipment Rules of Sailing
RRS	The Racing Rules of Sailing

## Revision

The Equipment Rules are revised and published every four years by World Sailing, the international authority for the sport. This edition becomes effective on 1 January 2017 except that for an event beginning in 2016 the date may be postponed by the Notice of Race and Sailing Instructions. Changes to the Equipment Rules are permitted under World Sailing Regulations 29.1.1 and 29.1.2. No changes are contemplated before 2020, but any changes determined to be urgent before then will be announced through National Authorities and posted on the World Sailing website ([sailing.org](http://sailing.org)).

## INTRODUCTION

---

### **Changes**

The ERS may only be changed as follows:

- (a) Prescriptions of an MNA may change a rule in ERS Part 1, for races under its jurisdiction.
- (b) **Class rules** may change ERS rules as permitted by rule A.1.

These restrictions do not apply if rules are changed to develop or test proposed rules in local races. The MNA may prescribe that its approval is required for such changes.

| Marginal markings indicate substantial changes to the 2013 – 2016 edition.

# PART 1 – USE OF EQUIPMENT

---

In addition to the rules in Part 1, **class rules** and the *Racing Rules of Sailing* contain rules governing the use of equipment. Appendix 1 provides a list of those racing rules.

## Section A – During an Event

### A.1 CLASS RULES

**Class rules** may change rules B.1, B.2 and B.3.

### A.2 CERTIFICATE

#### A.2.1 Having a Certificate

The **boat** shall have such valid **certificate** as required by its **class rules** or the **certification authority**.

#### A.2.2 Compliance with a Certificate

The **boat** shall comply with its **certificate**.

See also RRS rule 78 Compliance with Class Rules; Certificates.

## Section B – While Racing

### B.1 POSITION OF EQUIPMENT

#### B.1.1 Mast Upper Limit Mark

(a) TRILATERAL MAINSAIL

The **sail** shall be below the **mast upper limit mark**.

(b) QUADRILATERAL MAINSAIL

The **throat point** shall be below the **mast upper limit mark**.

#### B.1.2 Mast Lower Limit Mark

When a **sail** is set on a **main boom, foremast boom** or **mizzen boom**, the extension of the upper edge of the **spar** shall intersect the mast **spar** above the **mast lower limit mark**, with the boom **spar** on the mast **spar** centreplane and at 90° to the mast **spar**.

#### B.1.3 Boom Outer Limit Mark

The **leech** of any **sail** set on a **boom**, extended as necessary, shall intersect the upper edge of the boom **spar** forward of the **boom outer limit mark**.

#### B.1.4 Bowsprit Outer Limit Mark

The **tack** of any **headsail** set on a **bowsprit** shall be attached aft of the **bowsprit outer limit mark**.

#### B.1.5 Bowsprit Inner Limit Mark

The **bowsprit inner limit mark** shall not be outboard the **hull** when the **bowsprit** is set.

### B.2 HEADSAIL BOOMS

The fore end of a **headsail boom** shall be approximately on the **boat** centerplane.

### B.3 SPINNAKER STAYSAILS AND MIZZEN STAYSAILS

The **tack** of a spinnaker staysail or **mizzen** staysail shall be inboard the **sheerline**

# PART 2 – DEFINITIONS

---

## Section C – General Definitions

### C.1 CLASS

#### C.1.1 Class Authority

The body that governs the class as specified in the **class rules**.

### C.2 RULES

#### C.2.1 Class Rules

The rules that specify:

the **boat** and its use, **certification** and administration.

the **crew**.

**personal equipment** and its use, **certification** and administration.

**portable equipment** and its use, **certification** and administration.

any other equipment and its use, **certification** and administration.

changes to the *Racing Rules of Sailing* as permitted by RRS 86.1(c).

The term includes rules of handicap and rating systems.

#### C.2.2 Closed Class Rules

**Class rules** where anything not specifically permitted by the **class rules** is prohibited.

#### C.2.3 Open Class Rules

**Class rules** where anything not specifically prohibited by the **class rules** is permitted.

#### C.2.4 Class Rules Authority

The body that provides final approval of the **class rules**, **class rule** changes and **class rule** interpretations.

### C.3 CERTIFICATION

#### C.3.1 Certification Authority

World Sailing, the MNA in the country where the **certification** shall take place, or their delegates.

#### C.3.2 Certify/Certification

To issue a **certificate**, or apply a **certification mark** after successful **certification control**.

### C.3.3 Certificate

Documentary proof of successful **certification control** as required by the **class rules** or a **certification authority**.

For the **hull**: issued by World Sailing, the MNA of the owner, or their delegates.

For other items: issued by the **certification authority**.

The term includes handicap and rating certificates.

### C.3.4 Certification Mark

Proof of successful **certification control** of a part requiring **certification** applied as required by the **class rules** or a **certification authority**.

## C.4 CERTIFICATION CONTROL AND EQUIPMENT INSPECTION

See H.1 and H.2.

### C.4.1 Fundamental Measurement

The methods used as the primary means to establish the physical properties of equipment.

### C.4.2 Certification Control

The methods used as means of equipment control required by **class rules**, or a **certification authority**, for **certification**.

### C.4.3 Equipment Inspection

Control carried out at an event as required by the notice of race and the sailing instructions which may include **fundamental measurement**.

### C.4.4 Official Measurer

A person appointed or recognised, by the MNA of the country where the control takes place, to carry out **certification control** and when the **class rules** permit, **certification**. An MNA may have delegated this responsibility.

### C.4.5 In-House Official Measurer

An **official measurer** appointed in accordance with the World Sailing In-House Certification Programme.

### C.4.6 Equipment Inspector

A person appointed by a race committee to carry out **equipment inspection**.

### C.4.7 Limit Mark

A clearly visible mark of a single colour, contrasting to the part(s) on which it is placed, indicating a measurement point.

### C.4.8 Event Limitation Mark

A mark placed by a race committee on equipment whose replacement at the event is controlled by the **class rules**.

## C.5 PERSONAL DEFINITIONS

### C.5.1 Crew

A competitor, or team of competitors, that operates a **boat**.

### C.5.2 Personal Equipment

All personal effects carried or worn and items worn on board to keep warm and/or dry, and/or to protect the body, **personal flotation device**, safety harnesses and hiking aids worn to keep the person aboard or afloat.

### C.5.3 Personal Flotation Device

**Personal equipment** as required by the *rules* to assist the user to float in water.

## C.6 BOAT DEFINITIONS

### C.6.1 Boat

The equipment used by the **crew** to take part in a race.

It includes:

**hull(s)**  
structure(s) connecting **hulls**  
**hull appendage(s)**  
**ballast**  
**rig**  
**sail(s)**  
fittings  
boat **corrector weights** and  
all other items of equipment used

but excludes

consumables  
**personal equipment** and  
**portable equipment.**

### C.6.2 Boat Types

(a) MONOHULL

A **boat** with one **hull**.

(b) MULTIHULL

A **boat** with more than one **hull**.

(c) WINDSURFER

A **boat**.

(d) KITE-BOARD

A **boat**.

### C.6.3 Boat Control Definitions

(a) MAJOR AXES

The three major axes of the boat at 90° to each other – vertical, longitudinal and transverse – shall be related to the baseline and the hull centreplane.

See H.3.

(b) MEASUREMENT TRIM

Trim achieved when two points on the **hull(s)** are at set distances perpendicular to a plane. The plane, the points and distances to be specified in **class rules**.

(c) FLOTATION TRIM

Trim achieved with the **boat** floating in accordance with H.7.1 – Conditions for Weight and Flotation Measurement.

(d) WATERLINE

The line(s) formed by the intersection of the outside of the **hull(s)** and the water surface when the **boat** is floating in **measurement trim**.

(e) WATERPLANE

The plane passing through the **waterline**.

(f) BALLAST

Weight installed to influence the stability, flotation or total weight of the **boat**.

**Ballast** types:

(i) INTERNAL BALLAST

**Ballast** positioned inside a **hull**.

(ii) EXTERNAL BALLAST

**Ballast** positioned outside a **hull**.

(iii) MOVEABLE BALLAST

Internal **ballast** or external **ballast** that may be moved.

(iv) VARIABLE BALLAST

Water **ballast** the amount of which may be varied and which may also be moved.

(v) CORRECTOR WEIGHT

Weight installed in accordance with the **class rules** to correct deficiency in weight and/or its distribution.

### C.6.4 Boat Dimensions

(a) BOAT LENGTH

The longitudinal distance between the aftermost point and the foremost point of the **boat**, excluding **sails**, with **spars** set as appropriate.

See H.3.4.

- (b) **BOAT BEAM**  
The transverse distance between the outermost points of the **boat**.
- (c) **WATERLINE LENGTH**  
The longitudinal distance between the aftermost point and the foremost point of the **waterline**.
- (d) **WATERLINE BEAM**  
The transverse distance between the outermost points of the **waterline**.
- (e) **DRAFT**  
The vertical distance between the **waterplane** and the lowest point of the **boat**.
- (f) **MINIMUM DRAFT**  
The **draft** with all **hull appendages** in their highest position.
- (g) **MAXIMUM DRAFT**  
The **draft** with all **hull appendages** in their lowest position.
- (h) **BOAT WEIGHT**  
The weight of the **boat** excluding **sail(s)** and **variable ballast**.
- (i) **WINGSPAN**  
The maximum transverse distance between the outermost points of any **wings**.
- (j) **LIST ANGLE**  
The maximum angle of heel of the **boat**, measured relative to the **boat** floating upright, in the **condition for weight and flotation measurement** with **moveable ballast** moved fully to port or starboard.

### C.6.5 Boat Age

- (a) **SERIES DATE**  
The date on which the first **boat** of the design or the production series was first launched, whichever is earlier. Series Date does not change if the **boat** is modified.
- (b) **AGE DATE**  
The date on which the **boat** was first launched, or the date on which the **boat** was re-launched following any hull shell modification, excluding the transom, whichever is the later.

### C.6.6 Portable Equipment

Equipment permitted by **class rules** excluding:

the **boat**,  
**personal equipment**, and  
consumables.

Typical examples of portable equipment would include, mooring lines, paddles and bailers.

## Section D – Hull Definitions

### D.1 HULL TERMS

#### D.1.1 Hull


The hull shell including any transom, the deck including any superstructure, the internal structure including any cockpit, the fittings associated with these parts and any **corrector weights**.

#### D.1.2 Sheerline

The line formed by the intersection of the top of the deck and the outside of the **hull** shell, each extended as necessary.

#### D.1.3 Sheer

The projection of the **sheerline** on the centreplane.

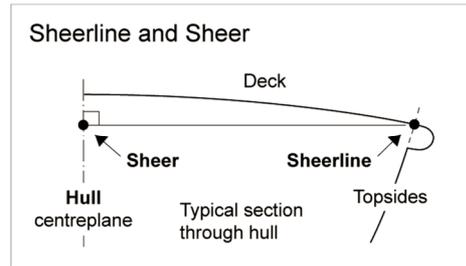

### D.2 HULL MEASUREMENT POINTS

#### D.2.1 Hull Datum Point

A point on the **hull** specified in the **class rules** from which **hull** measurements can be taken.

### D.3 HULL DIMENSIONS

#### D.3.1 Hull Length

The longitudinal distance between the aftermost point and the foremost point on the **hull(s)**, excluding fittings.


See H.3.4.

#### D.3.2 Hull Beam

The maximum transverse distance between the outermost points of the **hull(s)** excluding fittings.

#### D.3.3 Hull Depth

The vertical distance between the **waterplane** and the lowest point of the **hull**.

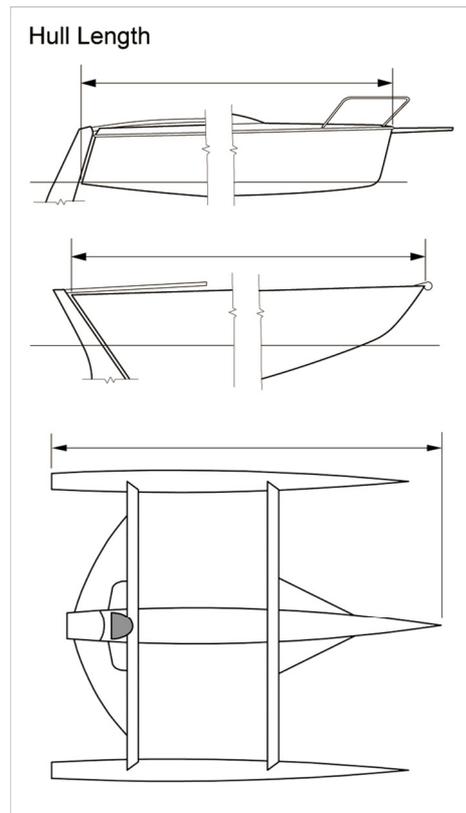

### D.4 WEIGHT

#### D.4.1 Hull Weight

The weight of the **hull**.

## Section E – Hull Appendage Definitions

### E.1 HULL APPENDAGE TERMS

#### E.1.1 Hull Appendage

Any item of equipment – including the items listed in E.1.2– which is:

wholly or partly below the **sheerline** or its extension when fixed or when fully exposed if retractable,

attached to the hull shell or another **hull appendage**, and

used to affect: stability, leeway, steerage, directional stability, motion damping, trim, displaced volume,

Any of the following shall be included in the **hull appendage**:

**corrector weights**,

integral **ballast**, and

associated fittings.

#### E.1.2 Hull Appendage Types

(a) KEEL

A fixed **hull appendage**, attached approximately on the **hull** centreplane, primarily used to affect stability and leeway.

(b) BILGE KEEL

A fixed **hull appendage**, attached off the **hull** centreplane, primarily used to affect stability and leeway.

(c) CANTING KEEL

A movable **hull appendage** primarily used to affect stability, attached approximately on the **hull** centreplane and rotating around a single longitudinal axis.

(d) FIN

A fixed **hull appendage** primarily used to affect leeway or directional control.

(e) BULB

A **hull appendage** containing **ballast** at the bottom of another **hull appendage** primarily used to affect stability.

(f) SKEG

A **fin** attached immediately in front of a **rudder**.

(g) CENTREBOARD

A retractable **hull appendage**, attached approximately on the **hull** centreplane and rotating about a single transverse axis which may move in relation to the **hull**, primarily used to affect leeway.

(h) DAGGERBOARD

A retractable **hull appendage**, attached approximately on the **hull** centreplane and not rotating, primarily used to affect leeway.

## PART 2 DEFINITIONS

---

(i) **BILGEBOARD**

A retractable **hull appendage**, attached off the **hull** centreplane, primarily used to affect leeway.

(j) **RUDDER**

A movable **hull appendage** primarily used to affect steerage.

(k) **TRIM TAB**

When a **rudder(s)** is used, a movable **hull appendage**, attached at the aft, or fore edge of another **hull appendage**.

(l) **WING**

A **hull appendage** attached to a **keel, bilge keel, canting keel, fin** or **bulb**, primarily used to affect leeway and/or lift.

(m) **FOIL**

A **hull appendage** attached to a **centreboard, daggerboard, bilgeboard** or **rudder**, primarily used to affect leeway and/or produce vertical lift.

## Section F – Rig Definitions

### F.1 GENERAL RIG TERMS

#### F.1.1 Rig

The **spars, spreaders, rigging**, fittings and any **corrector weights**.

#### F.1.2 Rig Configurations

(a) UNA RIG

A single-masted **rig** with a **mainsail** only.

(b) SLOOP RIG

A single-masted **rig** with a **mainsail** and one **headsail**.

(c) CUTTER RIG

A single-masted **rig** with more than one **headsail**.

(d) KETCH RIG

A two-masted **rig** with the fore mast – the **mainmast** – taller than the aft mast – the **mizzenmast** – set forward of the rudder stock.

(e) YAWL RIG

A two-masted **rig** with the fore mast – the **mainmast** – taller than the aft mast – the **mizzenmast** – set aft of the rudder stock.

(f) SCHOONER RIG

A two-masted **rig** with the fore mast – the **foremast** – shorter than, or the same height as, the aft mast – the **mainmast**.

#### F.1.3 Spar

The main structural part(s) of the **rig**, to, or from which **sails** are attached and/or supported. It includes its fittings and any **corrector weights**.

#### F.1.4 Spar Types

(a) MAST

A **spar** on which the **head** or **throat** of a **sail**, or a **yard**, is set. Includes its **standing rigging, running rigging**, and **spreader**s, but not **running rigging** and fittings that are not essential to the function of the mast as part of the **rig**.

**Mast** Types:

(i) MAINMAST

(a) The only **mast** in a **una rig, sloop rig** or **cutter rig**.

(b) The fore **mast** in a **ketch rig** or **yawl rig**.

(c) The aft **mast** in a **schooner rig**.

(ii) FOREMAST

The fore **mast** in a **schooner rig**.

(iii) MIZZENMAST

The aft **mast** in a **ketch rig** or **yawl rig**.

(b) BOOM

A **spar** attached at one end to a mast **spar** or a **hull** and on which the **clew** of a **sail** is set and on which the **tack** and/or **foot** of the **sail** may be set. Includes its **rigging**, but not **running rigging**, **running rigging** blocks and/or any kicking strap/strut arrangement.

**Boom** Types:

(i) FOREMAST SAIL BOOM

A **boom** attached to a **foremast spar** to support a **foremast sail**.

(ii) HEADSAIL BOOM

A **boom** attached to a **hull** to support a **headsail clew**.

(iii) MAIN BOOM

A **boom** attached to a **mainmast spar** to support a **mainsail**.

(iv) MIZZEN BOOM

A **boom** attached to a **mizzenmast spar** to support a **mizzen**.

(v) WISHBONE BOOM

A double **boom** attached to a mast **spar** to support a **sail** and which has one **spar** on each side of the **sail**.

(c) HULL SPARS

A **spar** attached to the **hull**.

(i) BOWSPRIT

A **hull spar** extending forward to attach **rigging** and/or the **tack** of a **headsail**, or **headsails**.

(ii) BUMPKIN

A **hull spar** extending aft to sheet a **sail** and/or attach **rigging**.

(iii) DECK SPREADER

A **hull spar** extending transversely to attach **standing rigging**.

(d) OTHER SPARS

Other **spar** types include their **rigging**, but not **running rigging**.

Other **Spar** Types:

(i) SPINNAKER POLE

A **spar** attached to the mast **spar** to set a spinnaker.

(ii) WHISKER POLE

A **spar** attached to the mast **spar** and a **headsail clew**.

(iii) GAFF

A **spar** attached at one end to a mast **spar** to set the peak, throat and/or head of a quadrilateral **sail**.

(iv) SPRIT

A **spar** attached at one end to a mast **spar** or a hull to set only the peak of a quadrilateral **sail**.

(v) YARD

A **spar** hoisted on a mast **spar** at a point between its ends to set the **head** of a quadrilateral sail or the **luff** of a lateen **sail**.

(vi) BAR

A **spar** to set and control a **kite**.

### F.1.5 Spreader

Equipment used to brace a **spar**, attached at one end to the **spar** and the other end to **rigging** and working in compression when in use.

### F.1.6 Rigging

Any equipment attached at one or both ends to **spars**, **sails** or other **rigging** and capable of working in tension only. Includes associated fittings which are not permanently fixed to a **hull**, **spar** or **spreader**.

### F.1.7 Rigging Types

#### (a) STANDING RIGGING

**Rigging** used to support a mast **spar** or **hull spar**. It may be adjustable but is not detached when *racing* except as below:

**Standing Rigging** types:

##### (i) SHROUD

**Rigging** used to provide transverse support for a mast **spar** or **hull spar** and which may also provide longitudinal support.

##### (ii) STAY

**Rigging** mainly used to provide longitudinal support for a mast **spar** or **hull spar** or a **sail** which may be detached while *racing*.

##### (iii) FORESTAY

**Rigging** used to provide forward support for a mast **spar**.

#### (b) RUNNING RIGGING

**Rigging** primarily used to adjust a **spar**, a **sail** or a **hull appendage**.

**Running Rigging** types:

##### (i) HALYARD

**Rigging** used to hoist a **sail**, **spar**, flag or a combination thereof.

##### (ii) BACKSTAY

**Rigging** mainly used to provide aft support for a mast **spar** above the **upper limit mark**.

##### (iii) RUNNING BACKSTAY

**Rigging** used to provide aft support for a mast **spar** at a point, or points, between the **upper limit mark** and the **forestay rigging point**.

##### (iv) CHECKSTAY

**Rigging** used to provide aft support for a mast **spar** at a point, or points, between the **lower limit mark** and the **forestay rigging point**.

##### (v) OUTHAUL

**Rigging** used to trim the **clew** of a **sail** along a boom **spar**.

##### (vi) SHEET

**Rigging** used to trim the **clew** of a **sail**, or a boom **spar**.

##### (vii) SPINNAKER GUY

**Rigging** used to trim the **tack** of a spinnaker.

##### (viii) FLYING LINES

**Rigging** used to trim a **kite**.

##### (ix) FRONT LINES

**Flying lines** used to transfer the power from a **kite** to the **crew**.

## PART 2 DEFINITIONS

---

(x) **BACK LINES**

**Flying lines** used for steering a **kite**.

(c) **OTHER RIGGING**

(i) **TRAPEZE**

**Rigging** attached to a mast **spar** used to support a single **crew** member.

### F.1.8 Foretriangle

The area formed by the foreside of the foremost mast **spar**, the foremost **forestay** and the deck including any superstructure.

### F.1.9 Limit Marks

(a) **LIMIT MARK DIMENSIONS**

(i) **LIMIT MARK WIDTH**

The minimum width measured in the length direction of the **spar**.

## F.2 MAST MEASUREMENT DEFINITIONS

### F.2.1 Mast Limit Marks

(a) **LOWER LIMIT MARK**

The **limit mark** for the setting of a boom **spar** or **sail**.

(b) **UPPER LIMIT MARK**

The limit mark for the setting of a **sail**.

### F.2.2 Mast Measurement Points

(a) **MAST DATUM POINT**

The point on the **mast** specified in the **class rules** used as a datum for measurement.

(b) **HEEL POINT**

The lowest point on the **spar** and its fittings.

(c) **TOP POINT**


The highest point on the **spar** and its fittings.

(d) **LOWER POINT**

The highest point of the **lower limit mark** at the aft edge of the **spar**.

(e) **UPPER POINT**

The lowest point of the **upper limit mark** at the aft edge of the **spar**.

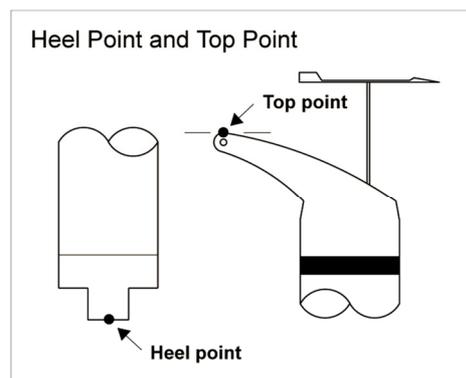

### F.2.3 Mast Dimensions

See H.4.

(a) **MAST LENGTH**

The distance between the **heel point** and the **top point**.

(b) **LOWER POINT HEIGHT**

The distance between the **mast datum point** and the **lower point**.

## PART 2 DEFINITIONS

(c) UPPER POINT HEIGHT

The distance between the **mast datum point** and the **upper point**.

(d) MAINSAIL LUFF MAST DISTANCE

The distance between the **lower point** and the **upper point**.

(e) RIGGING POINT


When **rigging** is attached:

**BY HOOK TERMINAL:** The lowest point of the hook where it intersects the **spar**, extended as necessary.

**BY TANG WITH THROUGH FIXING:** The lowest point of the **spar** through fixing where it intersects the **spar**.

**BY EYE WITH BOLT OR OTHER THROUGH FIXING:** The lowest point of the **spar** bolt, or through fixing, where it intersects the **spar**.

**IN OTHER WAYS:** The intersection of the outside of the **spar**, extended as necessary, and the centreline of the **rigging**.


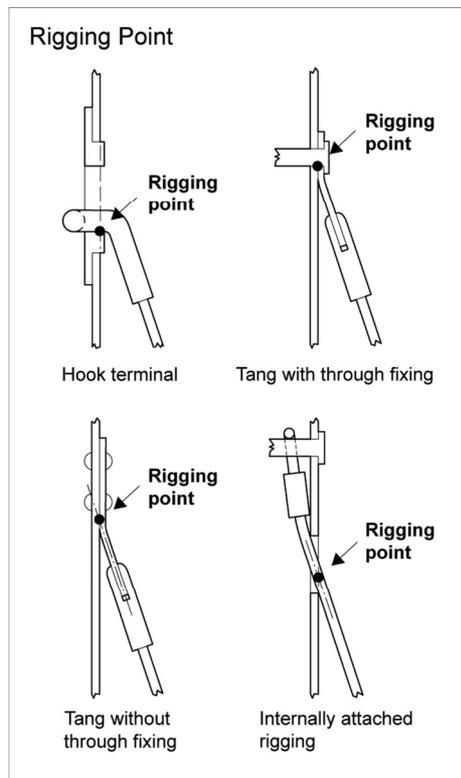


(f) FORESTAY HEIGHT

The distance between the **mast datum point** and the **rigging point** or the **top point** whichever is the lowest.

(g) SHROUD HEIGHT

The distance between the **mast datum point** and the **rigging point**.

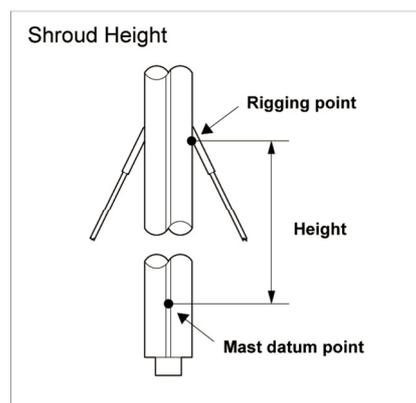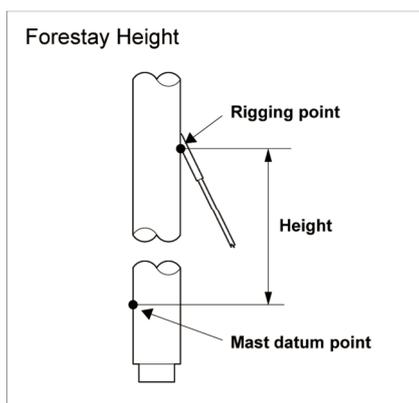

(h) BACKSTAY HEIGHT

The distance between the **mast datum point** and the **rigging point** or the **top point** whichever is the lowest.

(i) CHECKSTAY HEIGHT

The distance between the **mast datum point** and the **rigging point**.

(j) TRAPEZE HEIGHT

The distance between the **mast datum point** and the **rigging point**.


## PART 2 DEFINITIONS

(k) HEADSAIL HOIST HEIGHT

The distance between the **mast datum point** and the intersection of the **spar** and the lower edge of the **headsail halyard**, when at 90° to the **spar**, each extended as necessary.


(l) SPINNAKER HOIST HEIGHT

The distance between the **mast datum point** and the intersection of the **spar** and the lower edge of the **spinnaker halyard**, when at 90° to the **spar**, each extended as necessary.

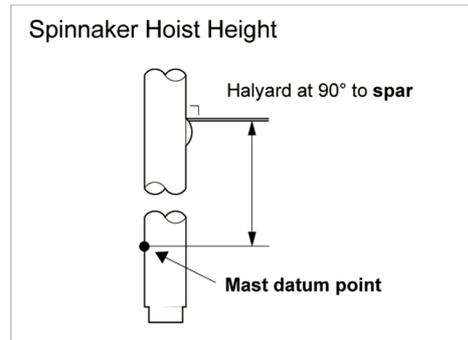

(m) MAST SPAR CURVATURE

The greatest distance between the **spar** and a straight line from the **upper point** to the **lower point** taken at 90° to the straight line when the **spar** is resting on one side.

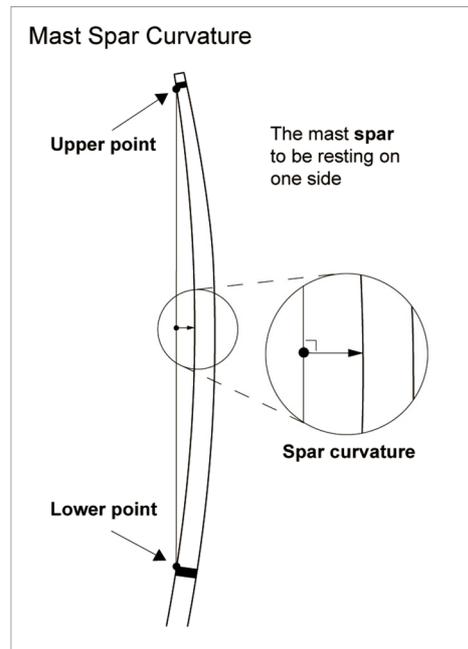


(n) MAST SPAR DEFLECTION

The difference in distance, at a specified distance from the **mast datum point**, between the **spar** and a straight line from the **upper point** to the **lower point** taken at 90° to the straight line with and without a specified load at the specified distance when the **spar** is horizontal at and supported at these points.

(i) FORE-AND-AFT: Measured with the aft edge up.

(ii) TRANSVERSE: Measured with one side up.


See H.4.5.

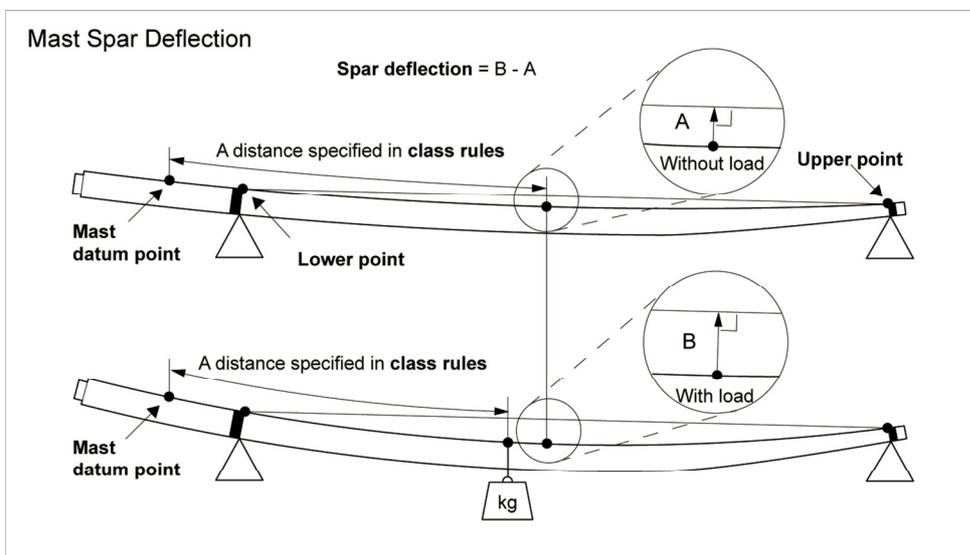

## PART 2 DEFINITIONS

### (o) MAST SPAR CROSS SECTION

- (i) **FORE-AND-AFT**: The fore-and-aft dimension, including any **sail track**, at a specified distance from the **mast datum point**.
- (ii) **TRANSVERSE**: The transverse dimension, at a specified distance from the **mast datum point**.

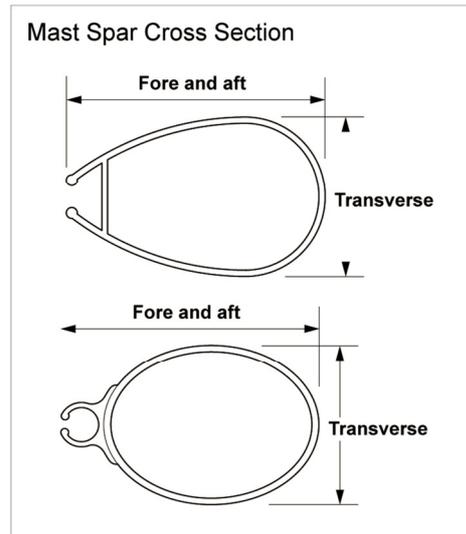

### (p) MAST SPAR WEIGHT


The weight of the **spar** including fittings and **corrector weights**.

### (q) MAST WEIGHT

The weight of the **mast**.

### (r) MAST TIP WEIGHT


The weight of the **mast** measured at the **upper point** when the **spar** is supported at the **lower point**.

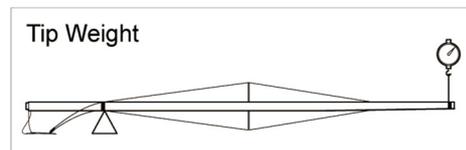

See H.4.6.

### (s) MAST CENTRE OF GRAVITY HEIGHT



The distance from the **mast datum point** to centre of gravity of the **mast**.

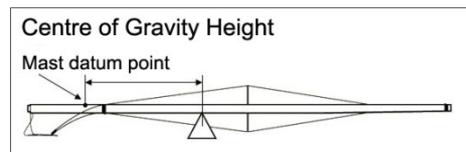

## F.2.4 Mast Fittings

### (a) SPREADER


- (i) **LENGTH**: The distance between the inner edge of the **shroud** at the lower edge of the **spreader** and the intersection of the lower edge of the **spreader**, extended as necessary, and the **spar**.
- (ii) **HEIGHT**: The distance between **mast datum point** and the intersection of the lower edge of the **spreader**, extended as necessary, and the **spar**.

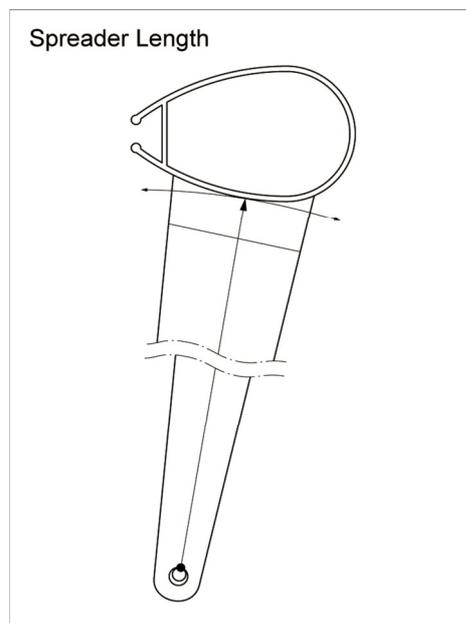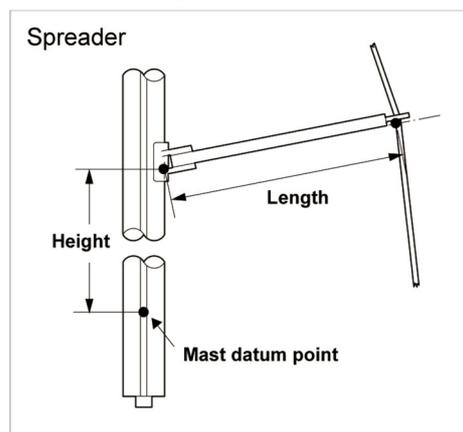

## PART 2 DEFINITIONS

### (b) SPINNAKER POLE FITTING

- (i) **HEIGHT**: The distance between the **mast datum point** and the centre of the highest bearing part of the fitting.
- (ii) **PROJECTION**: The shortest distance between the outermost point of the fitting and the **spar**.

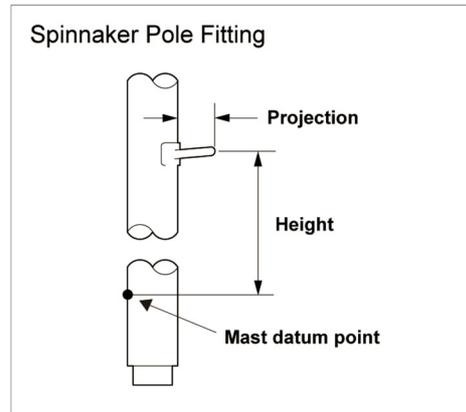

## F.3 BOOM MEASUREMENT DEFINITIONS

### F.3.1 Boom Measurement Points

#### (a) OUTER POINT

The point on the boom **outer limit mark**, at the upper edge of the **spar**, nearest the fore end of the **spar**.

### F.3.2 Boom Limit Marks

#### (a) OUTER LIMIT MARK


The **limit mark** for the setting of a **mainsail**, **foresail** or **mizzen**.

### F.3.3 Boom Dimensions

See H.4.


#### (a) OUTER POINT DISTANCE

The distance between the **outer point** and the aft edge of the mast **spar**, with the boom **spar** on the mast **spar** centreplane and at 90° to the mast **spar**.

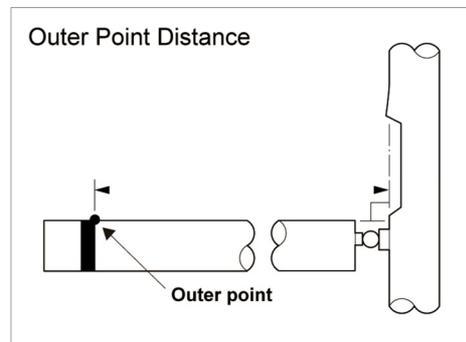

#### (b) BOOM SPAR CURVATURE

The greatest distance between the **spar** and a straight line from the uppermost fore end of the **spar** to the **outer point** or, where there is no **outer point**, to the uppermost aft end of the **spar**, taken at 90° to the straight line when the spar is resting on one side.

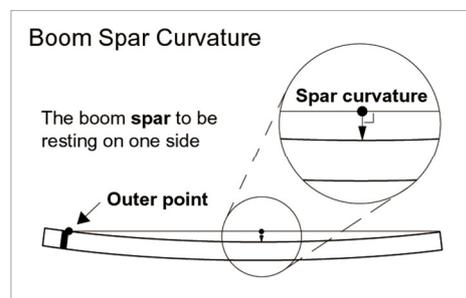

## PART 2 DEFINITIONS

### (c) BOOM SPAR DEFLECTION

The difference in distance, at a specified distance from the **outer point**, between

the **spar**


and a straight line from the **outer point** to the top of the fore end of the **spar**

taken at 90° to the straight line and with and without a specified load at the specified distance when the **spar** is horizontal and supported at these points.

(i) VERTICAL: Measured with the top edge up.

(ii) TRANSVERSE: Measured with one side up.

See H.4.5.

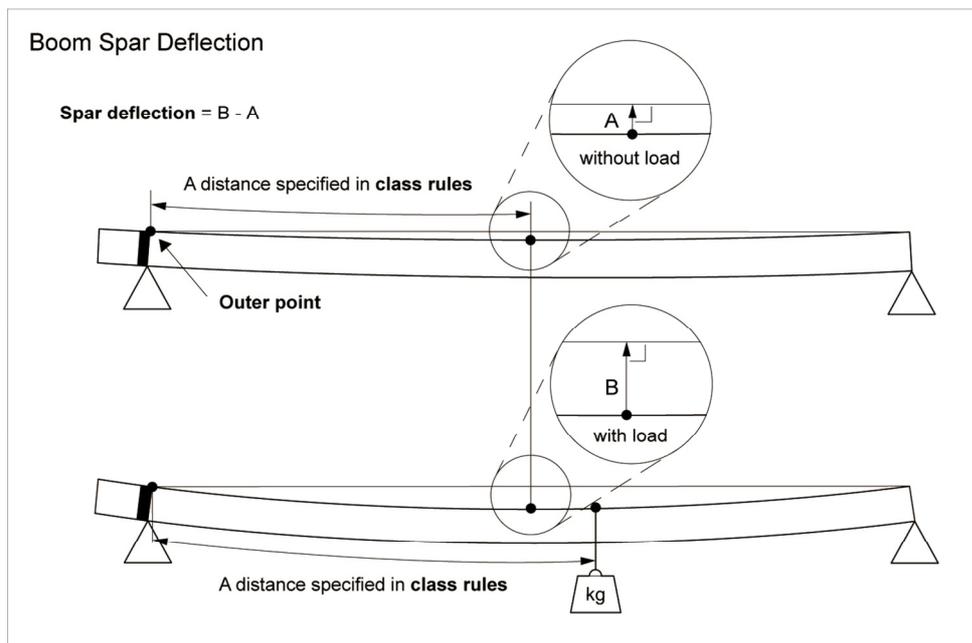


### (d) BOOM SPAR CROSS SECTION

(i) VERTICAL: The vertical dimension, including any **sail track**, at a specified distance from the **outer point**.

(ii) TRANSVERSE: The transverse dimension at a specified distance from the **outer point**.

### (e) BOOM WEIGHT

The weight of the **boom**.

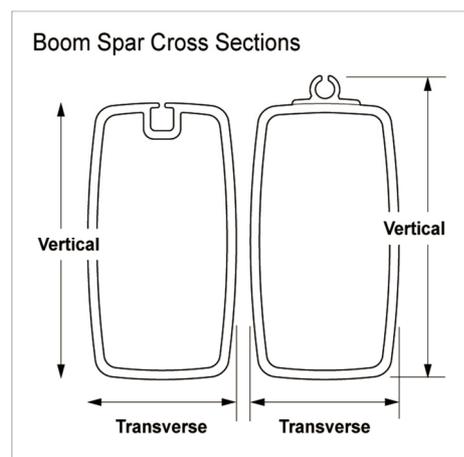

## F.4 SPINNAKER/WHISKER POLE MEASUREMENT DIMENSIONS

See H.4.

- (a) SPINNAKER/WHISKER POLE LENGTH


The distance between the ends of the **spinnaker/whisker pole**.

- (b) SPINNAKER/WHISKER POLE SPAR CROSS SECTION

The sectional dimensions at specified distances from an end of the **spinnaker/whisker pole**.

- (c) SPINNAKER/WHISKER POLE WEIGHT

The weight of the **spinnaker/whisker pole**.

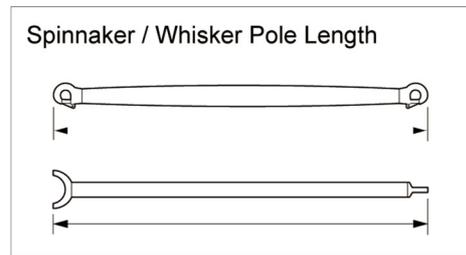

## F.5 BOWSPRIT MEASUREMENT DEFINITIONS

### F.5.1 Bowsprit Measurement Points

- (a) BOWSPRIT INNER POINT

The point of the **bowsprit inner limit mark**, at the upper edge of the **spar**, nearest the outboard end of the **spar**.

- (b) BOWSPRIT OUTER POINT

The point of the **bowsprit outer limit mark**, at the upper edge of the **spar**, nearest the inner end of the **spar**, or the outboard end of the **spar** when there is no **outer limit mark**.


### F.5.2 Bowsprit Limit Marks

- (a) BOWSPRIT INNER LIMIT MARK

The **limit mark** for the setting of the **spar**.

- (b) BOWSPRIT OUTER LIMIT MARK

The **limit mark** for the setting of a **headsail**.

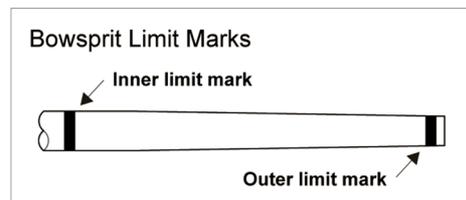

### F.5.3 Bowsprit Dimensions

See H.4.

- (a) BOWSPRIT POINT DISTANCE


The distance between the **bowsprit inner point** and the **bowsprit outer point**.

- (b) BOWSPRIT SPAR CROSS SECTION

The sectional dimensions at specified positions.

- (c) BOWSPRIT WEIGHT

The weight of the **bowsprit**.

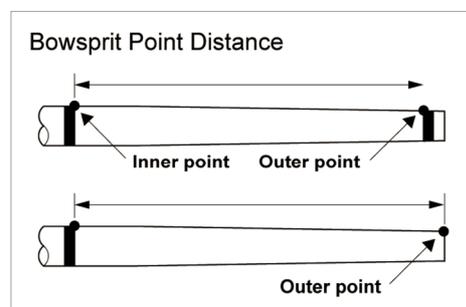

## F.6 FORETRIANGLE MEASUREMENT DEFINITIONS

### F.6.1 Foretriangle Dimensions

(a) FORETRIANGLE BASE

The longitudinal distance between the intersection of the fore side of the mast **spar**, extended as necessary, and the deck including any superstructure, and the intersection of the centreline of the **forestay**, extended as necessary, and the deck, or bowsprit **spar**.

See H.3.4.



(b) FORETRIANGLE HEIGHT

The distance between the intersection of the **sheer** and the fore side of the mast **spar**, extended as necessary, and the **forestay rigging point**.

See H.4.

(c) FORETRIANGLE AREA

Half the product of the **foretriangle base** and the **foretriangle height**.

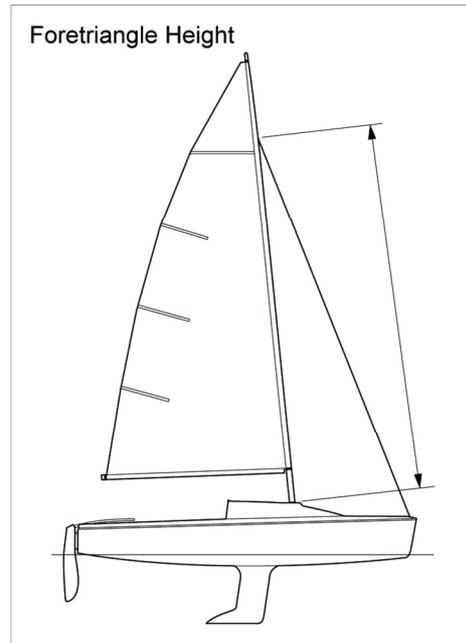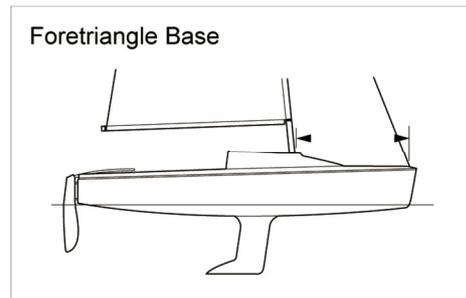

## F.7 SAIL SETTING MEASUREMENT DEFINITIONS

### F.7.1 Spinnaker Tack Distance

The maximum longitudinal distance from the fore side of the mast **spar** to the end of the longest **spinnaker pole** or the **bowsprit outer point** measured on or near the **boat** centreplane; or the longitudinal distance from the fore side of the mast spar, extended as necessary, and the deck including any superstructure, forward to the spinnaker tack point on deck; whichever is the greatest.

## Section G – Sail Definitions

### Subsection A – Trilateral Sails

Definitions relating to **sails** with only three **sail edges**:

“MAINSAIL” also applies to **foremast sail** and **mizzen**.

“HEADSAIL” also applies to “jib” and “genoa”.

“SPINNAKER” also applies to “gennaker”.

#### G.1 GENERAL SAIL TERMS

##### G.1.1 Sail

An item of equipment, used to propel the **boat**. It includes any of the following added parts:

**sail reinforcements**

**batten pockets** and associated fittings

**windows**

**stiffening**

**tabling**

**sail edge** ropes and wires

**attachments**

other parts as permitted by **class rules**.

##### G.1.2 Set Flying

A **sail** set with no **sail edge** attached to the **rig**.

##### G.1.3 Sail Types

(a) MAINSAIL

A **sail** with the **luff** attached to the **mainmast spar**. The lowest of the **sails** if more than one **sail** with the **luff** set to that **spar**.

(b) FOREMAST SAIL

A **sail** with the **luff** attached to the **foremast spar**. The lowest of the **sails** if more than one **sail** with the **luff** set to that **spar**.

(c) MIZZEN

A **sail** with the **luff** attached to the **mizzenmast spar**. The lowest of the **sails** if more than one **sail** with the **luff** set to that **spar**.

(d) HEADSAIL

A **sail** set forward of the mast **spar**, or of the foremost mast **spar** if more than one mast.

(e) KITE

A **sail** attached to the **bar**.

**G.1.4 Sail Construction**

(a) BODY OF THE SAIL

The **sail** excluding the areas where parts are added as per G.1.1.

(b) PLY

A sheet of sail material.

(c) SOFT SAIL

A **sail** where the **body of the sail** is capable of being folded flat in any direction without damaging any **ply** other than by creasing.

(d) WOVEN PLY

A **ply** which, when torn, can be separated into fibres without leaving evidence of a film.

(e) LAMINATED PLY

A **ply** made up of more than one layer.

(f) SINGLE-PLY SAIL

A **sail**, except at **seams**, where all parts of the **body of the sail** consist of only one **ply**.

(g) DOUBLE LUFF SAIL

A **sail** with more than one **luff**, or a **sail** passing around a **spar** and attached back on itself.

(h) SEAM

Overlap where two or more **ply** forming the **body of the sail** are joined.

(i) DART

An overlap formed at a **sail edge** by overlapping the **ply** edges of a cut in the **body of the sail**.

(j) TUCK

Overlap where a **ply** is folded and joined.

(k) BATTEN POCKET

**Ply** to form a pocket for a batten.

(l) SAIL OPENING

Any opening other than openings created by **attachments** or **batten pockets**.

(m) WINDOW

A predominantly transparent **ply** in the **body of the sail**.

(n) STIFFENING

Corner boards and battens.

(o) ATTACHMENTS

cringles  
straps  
hanks  
slides  
adjustment eyes  
adjustment points  
reefing eyes  
reefing points, and  
blocks and their fastenings.

See H.5.3.

(p) SAIL EDGE SHAPE

The shape of a **sail edge** as a comparison with a straight line between **corner points** or,  
in the case of a **leech** other than of a gennaker or spinnaker, between the **clew point** and the **aft head point**.

**G.2 SAIL EDGES**

**G.2.1 Foot**

The bottom edge.

**G.2.2 Leech**

The aft edge.

**G.2.3 Luff**

The fore edge.

**G.2.4 Sail Leech Hollow**

Concavity in the shape of a **leech** between adjacent **batten pockets**, or a **batten pocket** and the adjacent **corner point**, or in the case of a **mainsail**, **foremast sail**, **mizzen** or a **headsail** other than a spinnaker or a gennaker, between the **aft head point** and the adjacent **batten pocket**.

**G.3 SAIL CORNERS**

**G.3.1 Clew**

The region where the **foot** and the **leech** meet.


**G.3.2 Head**

The region at the top.

**G.3.3 Tack**

The region where the **luff** and the **foot** meet.


## PART 2 DEFINITIONS

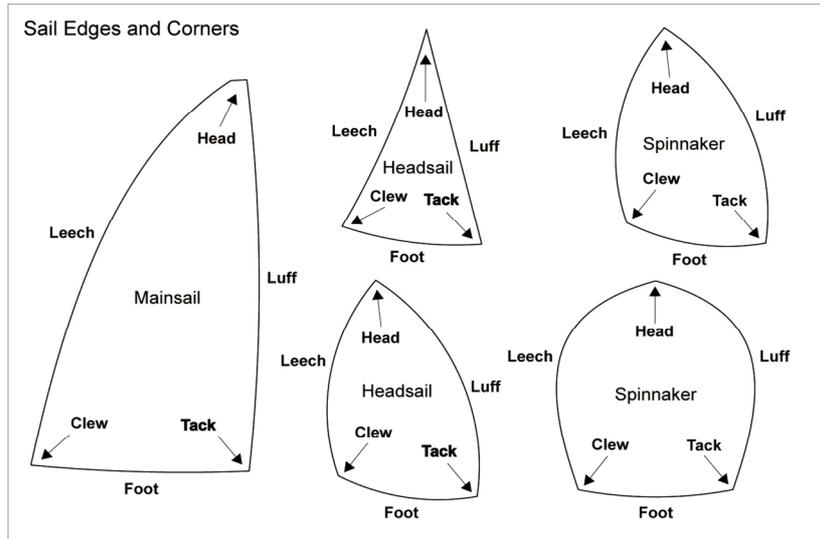

### G.4 SAIL CORNER MEASUREMENT POINTS



#### G.4.1 Clew Point

The intersection of the **foot** and the **leech**, each extended as necessary.

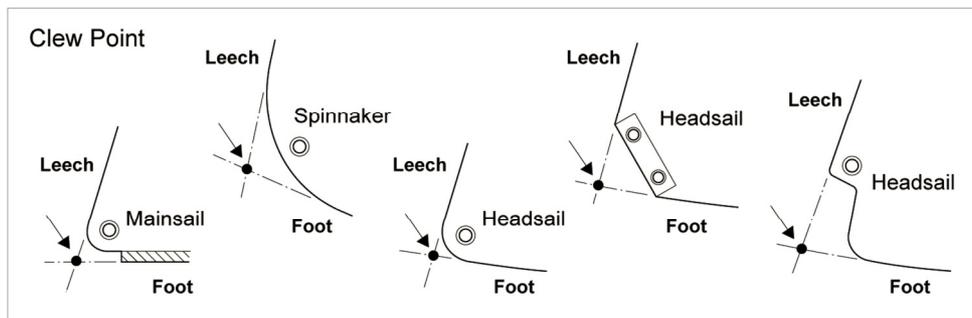


#### G.4.2 Head Point

- MAINSAIL:** The intersection of the **luff**, extended as necessary, and the line through the highest point of the **sail** at  $90^\circ$  to the **luff**.
- HEADSAIL:** The intersection of the **luff**, extended as necessary, and the line at  $90^\circ$  to the **luff** passing through the highest point of the **sail** excluding **attachments** and any luff tape.
- SPINNAKER:** The intersection of the **luff** and the **leech**, extended as necessary.

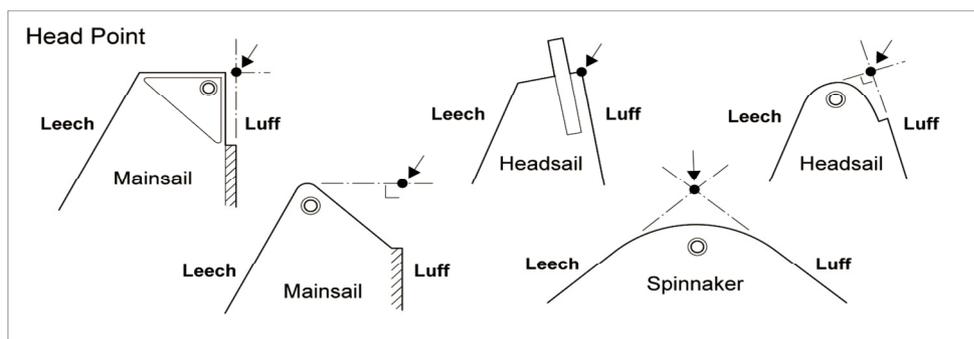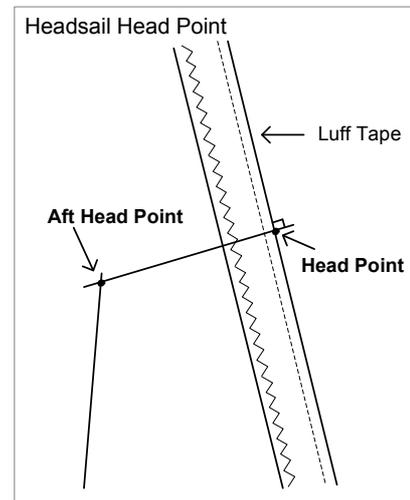

**G.4.3 Tack Point**

The intersection of the **foot** and the **luff**, each extended as necessary.

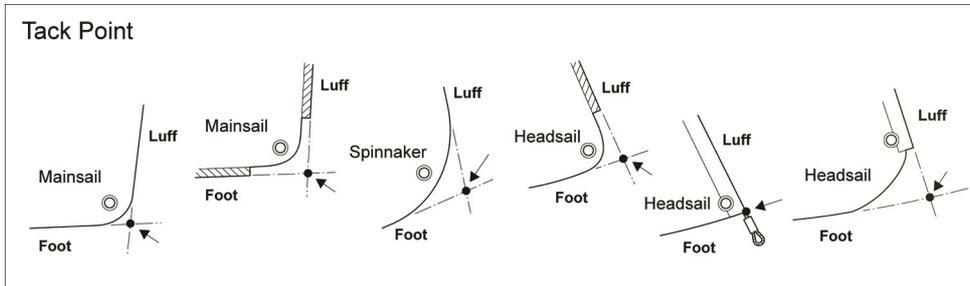

**G.5 OTHER SAIL MEASUREMENT POINTS**

**G.5.1 Quarter Leech Point**

The point on the **leech** equidistant from the **half leech point** and the **clew point**.

**G.5.2 Half Leech Point**

The point on the **leech** equidistant from the **head point** and the **clew point**.

**G.5.3 Three-Quarter Leech Point**


The point on the **leech** equidistant from the **head point** and the **half leech point**.

**G.5.4 Seven-Eighths Leech Point**

The point on the **leech** equidistant from the **head point** and the **three-quarter leech point**.

**G.5.5 Upper Leech Point**


The point on the **leech** a specified distance from the **head point**.

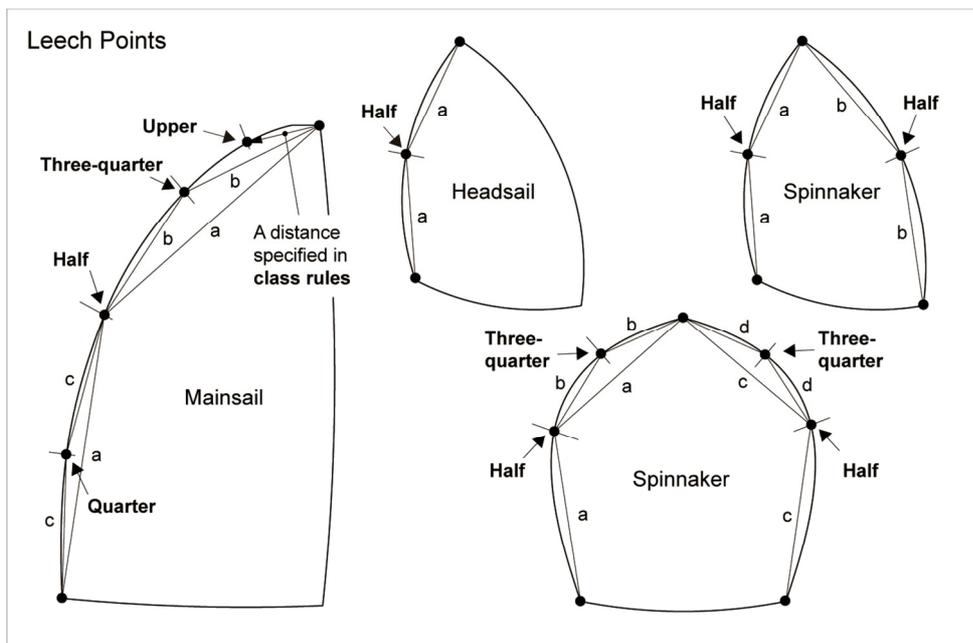

## PART 2 DEFINITIONS

### G.5.6 Aft Head Point

**MAINSAIL** and **HEADSAIL**: The intersection of the **leech** extended as necessary and the line through the **head point** at  $90^\circ$  to the **luff**.

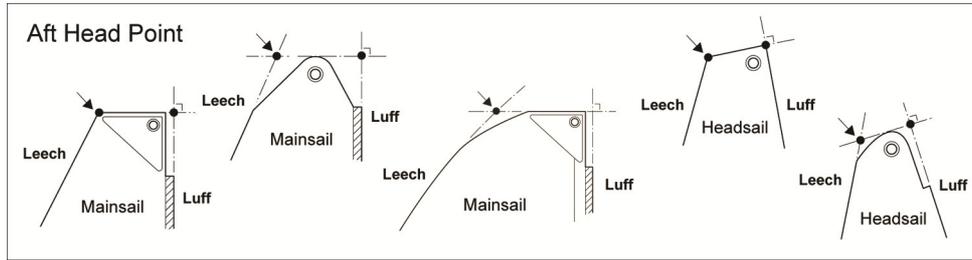

### G.5.7 Quarter Luff Point

The point on the **luff** equidistant from the **half luff point** and the **tack point**.

### G.5.8 Half Luff Point

The point on the **luff** equidistant from the **head point** and the **tack point**.

### G.5.9 Three-Quarter Luff Point

The point on the **luff** equidistant from the **head point** and the **half luff point**.

### G.5.10 Seven-Eighths Luff Point


The point on the **luff** equidistant from the **head point** and the **three-quarter luff point**.

### G.5.11 Upper Luff Point

The point on the **luff** a specified distance from the **head point**.

### G.5.12 Mid Foot Point

The point on the **foot** equidistant from the **tack point** and the **clew point**.

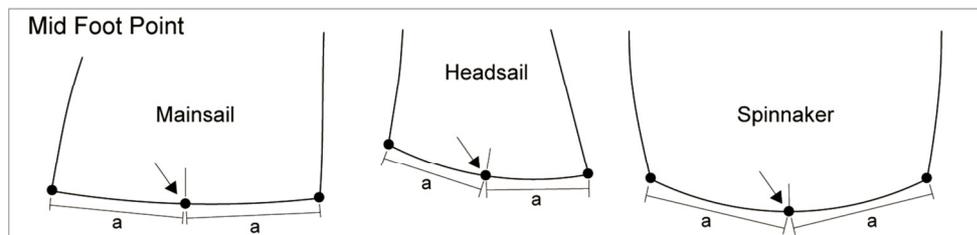

## G.6 SAIL REINFORCEMENT

### G.6.1 Primary Reinforcement


An unrestricted number of additional layers of **ply** of permitted material:

- at a corner
- at an adjustment point
- at a reefing point adjacent to the **luff**
- at a reefing point adjacent to the **leech**
- at a **sail** recovery point
- where permitted by the **class rules**

**G.6.2 Secondary Reinforcement**

Not more than two additional layers of **ply** of permitted material each not thicker than the maximum thickness of the **ply** of the **body of the sail**:

- at a corner
- at an adjustment point
- at a reefing point
- at a **sail** recovery point
- to form a **flutter patch**
- to form a **chafing patch**
- to form a **batten pocket patch**
- where permitted by the **class rules**

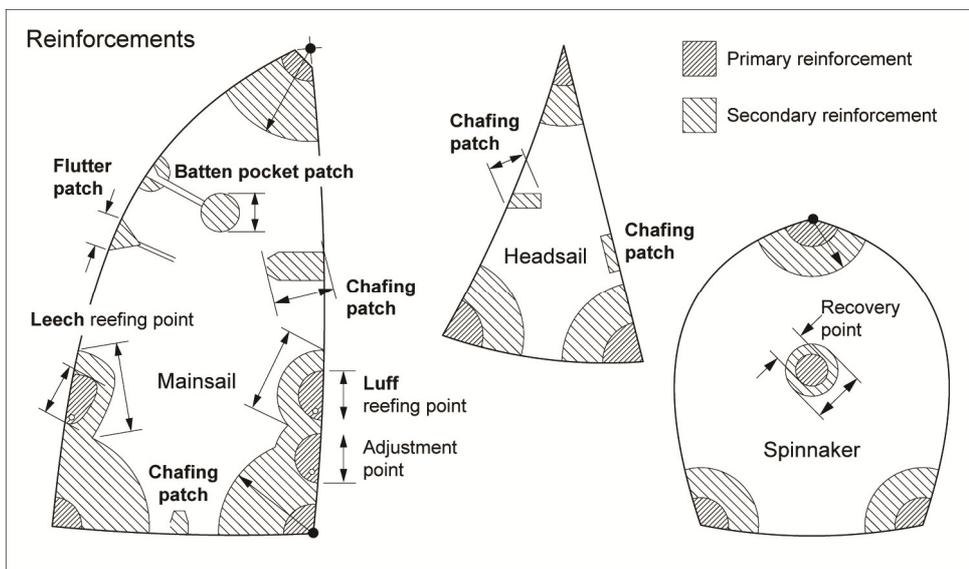

**G.6.3 Tabling**

Additional **ply** and/or folded **ply** overlap(s) at a **sail edge**.

**G.6.4 Batten Pocket Patch**

**Secondary reinforcement** at an end of a **batten pocket**.

**G.6.5 Chafing Patch**

**Secondary reinforcement** where a **sail** can touch a **spreader**, stanchion, **shroud** or **spinnaker pole**.

**G.6.6 Flutter Patch**

**Secondary reinforcement** on the **leech** or the **foot** at the end of a **seam**.

**G.7 PRIMARY SAIL DIMENSIONS**

See H.5.

**G.7.1 Foot Length**


The distance between the **clew point** and the **tack point**.



## PART 2 DEFINITIONS

### G.7.9 Top Width

- (a) MAINSAIL and HEADSAIL: The distance between the **head point** and the **aft head point**.


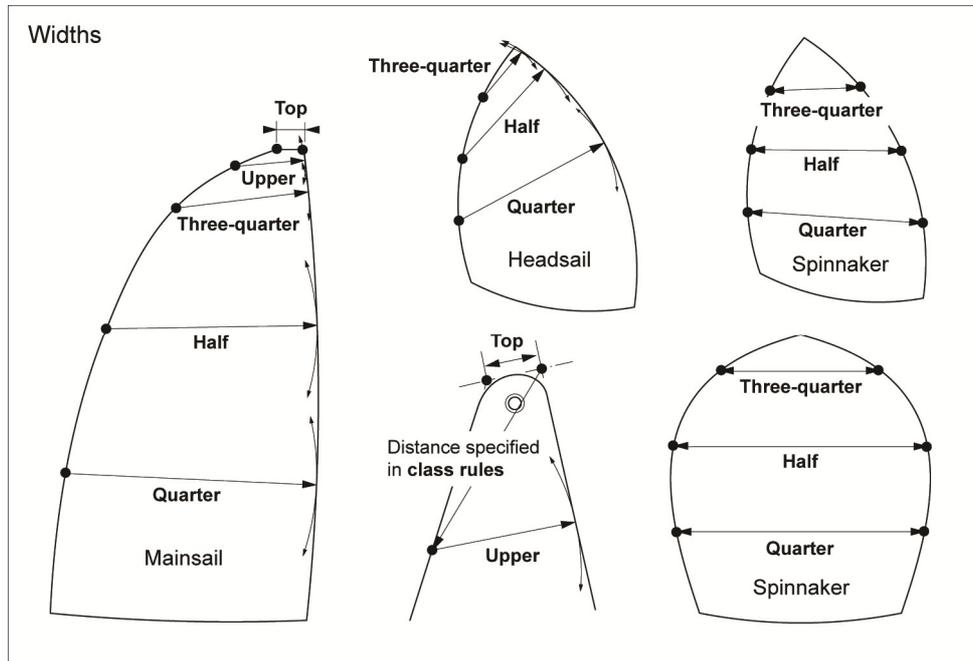


### G.7.10 Diagonals

- (a) CLEW DIAGONAL: The distance between the **clew point** and the **half luff point**.
- (b) TACK DIAGONAL: The distance between the **tack point** and the **half leech point**.

### G.7.11 Foot Median

The distance between the **head point** and the **mid foot point**.

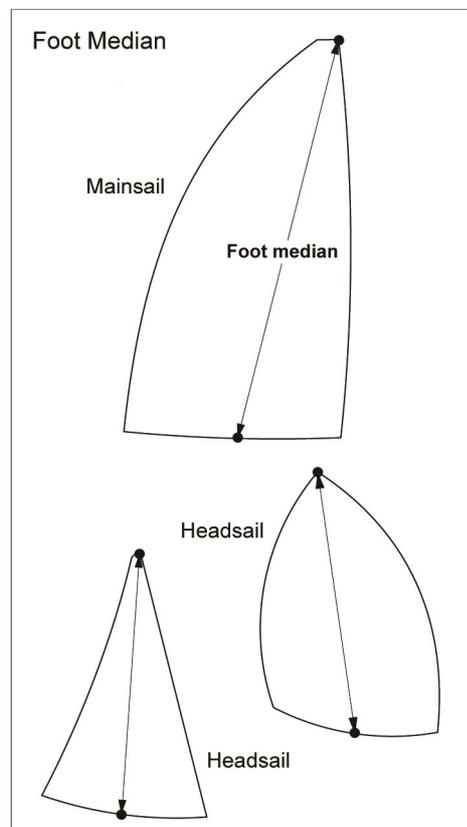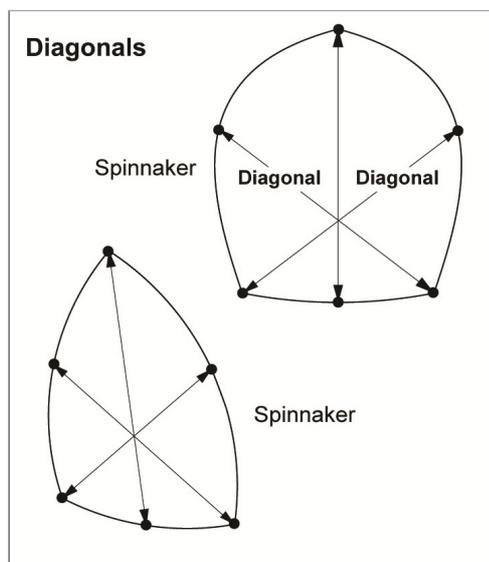

## PART 2 DEFINITIONS

### G.7.12 Luff Perpendicular

The shortest distance between the **clew point** and the **luff**.


## G.8 OTHER SAIL DIMENSIONS

See H.5.

### G.8.1 Batten Pocket Length

(a) **INSIDE**: The greatest distance between the **sail edge** and the internal extreme end of the **batten pocket**, measured parallel to the pocket centreline. The effect of any elastic or other retaining device and any local widening for batten insertion shall be ignored.


(b) **OUTSIDE**: The greatest distance between the **sail edge** and the external extreme end of the **batten pocket**, measured parallel to the pocket centreline. The effect of any local widening for batten insertion shall be ignored.

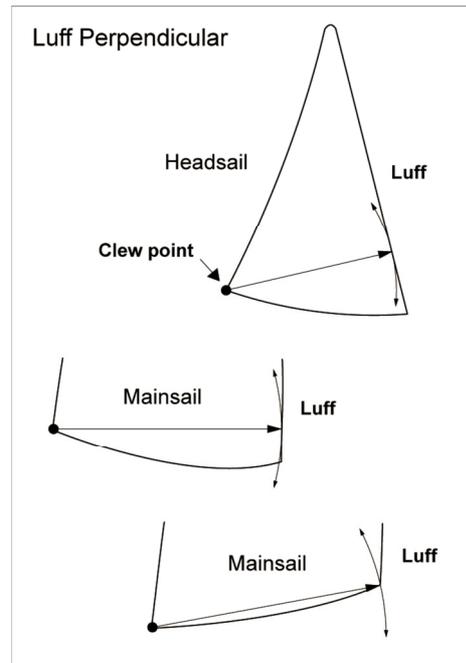

### G.8.2 Batten Pocket Width

(a) **INSIDE**: The greatest distance between inside edges of the **batten pocket** measured at 90° to pocket centreline. Local widening for batten insertion shall be ignored.

(b) **OUTSIDE**: The greatest distance between the outside edges of the **batten pocket** measured at 90° to the pocket centreline. Local widening for batten insertion shall be ignored.

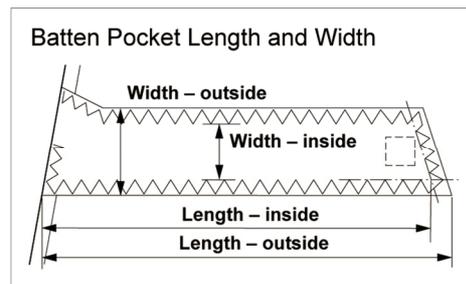

### G.8.3 Foot Irregularity


The maximum distance between the edges of the **foot** when first the **tack point** and then the **clew point** are superimposed on any part of the **foot**.

### G.8.4 Reinforcement Size

(a) **AT A CORNER**: The greatest distance measured from the **sail corner measurement point**.

(b) **TABLING WIDTH**: The width of **tabling** measured at 90° to the **sail edge**.

(c) **ELSEWHERE**: The greatest dimension of the **sail reinforcement**.

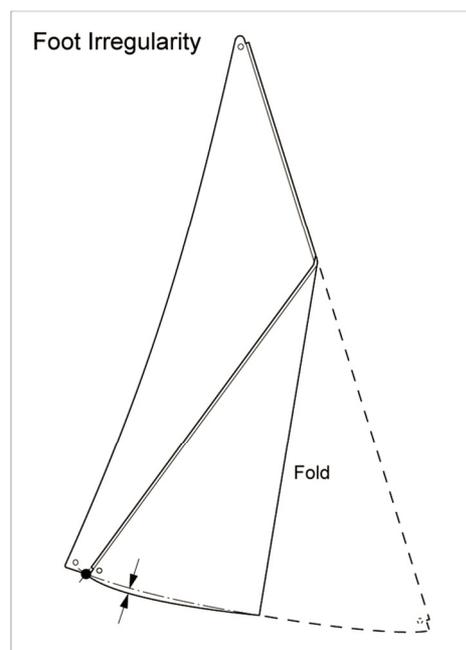

## PART 2 DEFINITIONS

### G.8.5 Seam Width

The width of a **seam** measured at 90° to the **seam**.

### G.8.6 Dart Width

The width of a **dart** measured at 90° to the **dart** centreline.

### G.8.7 Tuck Width

The width of a **tuck** measured at 90° to the **tuck** centreline.

### G.8.8 Attachment Size

#### (a) AT A CORNER OR AN EDGE

##### (i) LENGTH

**AT THE HEAD:** The dimension from the **head point** along the **luff** or its extension to a line through the highest point of the **attachment** at 90° to the **luff**.

**AT THE TACK:** The dimension from the **tack point** along the **luff** or its extension to a line through the lowest point of the **attachment** at 90° to the **luff**.

**AT THE CLEW:** The greatest dimension from the **clew point**.




**AT AN EDGE:** The greatest dimension from the **sail edge**.

##### (ii) WIDTH

The greatest dimension measured perpendicular to the length.

#### (b) ELSEWHERE

The greatest dimension of the **attachment**.

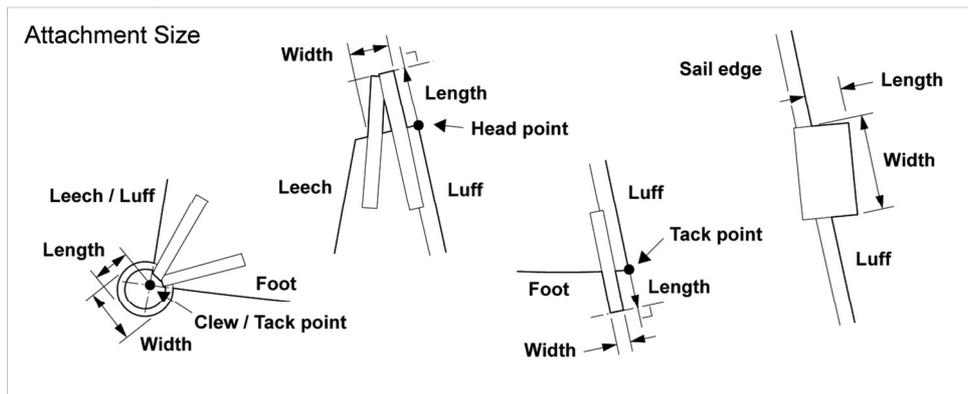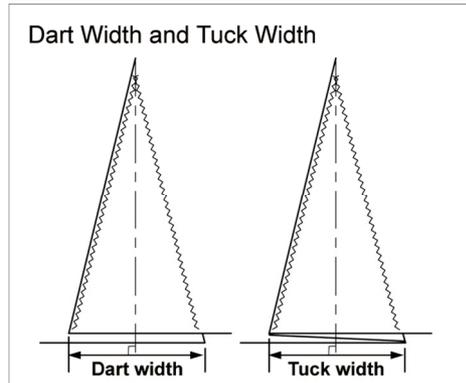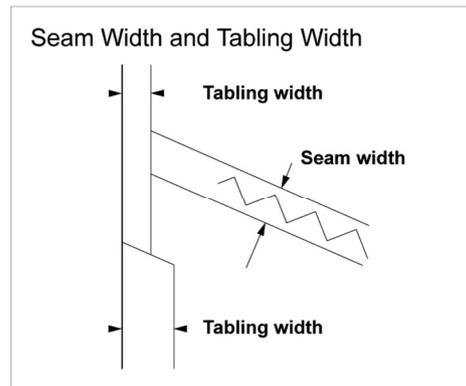


### G.8.9 Window Ply Area

The area of the **window ply**.

### G.8.10 Window Area

The **window ply area** excluding **seams**.

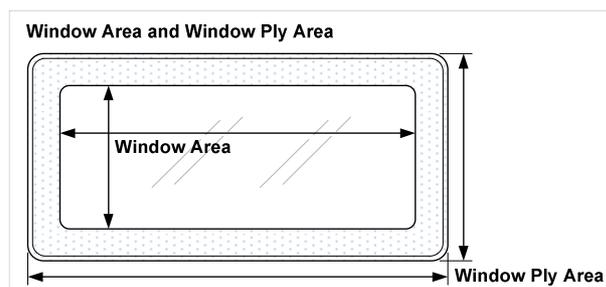

## Subsection B – Additions for Other Sails

The following definitions for non-trilateral sails are additional to or vary those given in Subsection A of this Section.

### G.2 SAIL EDGES

#### G.2.5 Head

The top edge.


### G.3 SAIL CORNERS

#### G.3.4 Peak

The region where the **head** and the **leech** meet.

#### G.3.5 Throat

The region where the **head** and the **luff** meet.

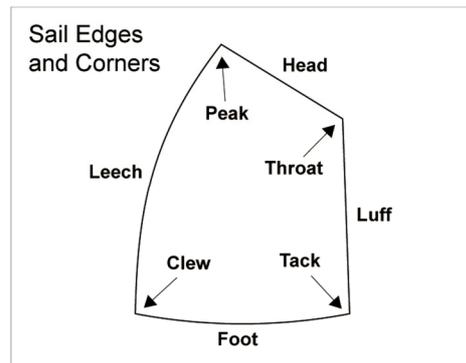


### G.4 SAIL CORNER MEASUREMENT POINTS

#### G.4.4 Peak Point

The intersection of the **head** and **leech**, each extended as necessary.

#### G.4.5 Throat Point

The intersection of the **head** and **luff**, each extended as necessary.

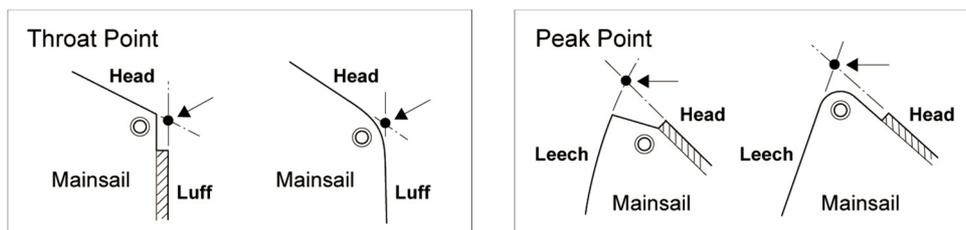

### G.5 OTHER SAIL MEASUREMENT POINTS

#### G.5.2 Half Leech Point

The point on the **leech** equidistant from the **peak point** and the **clew point**.

#### G.5.3 Three-Quarter Leech Point

The point on the **leech** equidistant from the **peak point** and the **half leech point**.

#### G.5.4 Seven-Eighths Leech Point

The point on the **leech** equidistant from the **peak point** and the **three-quarter leech point**.

#### G.5.5 Upper Leech Point

The point on the **leech** a specified distance from the **peak point**.

#### G.5.8 Half Luff Point

The point on the **luff** equidistant from the **peak point** and the **tack point**.

## PART 2 DEFINITIONS

### G.5.9 Three-Quarter Luff Point

The point on the **luff** equidistant from the **peak point** and the **half luff point**.

### G.5.10 Seven-Eighths Luff Point

The point on the **luff** equidistant from the **peak point** and the **three-quarter luff point**.

## G.7 PRIMARY SAIL DIMENSIONS

See H.5.

### G.7.2 Leech Length

The distance between the **peak point** and the **clew point**.

### G.7.3 Luff Length

The distance between the **throat point** and the **tack point**.

### G.7.10 Diagonals

#### (a) CLEW DIAGONAL

The distance between the **clew point** and the **throat point**.

#### (b) TACK DIAGONAL


The distance between the **tack point** and the **peak point**.

### G.7.11 Foot Median

The distance between the **peak point** and the **mid foot point**.

### G.7.13 Head Length

The distance between the **peak point** and the **throat point**.

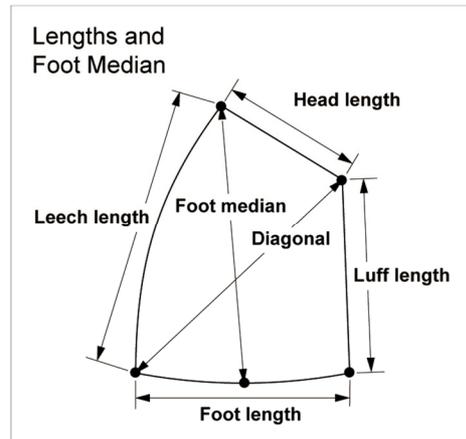

# PART 3 – RULES GOVERNING EQUIPMENT CONTROL AND INSPECTION

---

## Section H – Equipment Control and Inspection

### H.1 CERTIFICATION CONTROL

- H.1.1 An **official measurer** shall not carry out **certification control** of any part of a **boat** owned, designed or built by himself, or in which he is an interested party, or has a vested interest, except where permitted by the MNA or World Sailing for In-House Certification.
- H.1.2 If an **official measurer** is in any doubt as to the application of, or compliance with, the **class rules** he shall consult the **certification authority** before signing a certification control form or applying a **certification mark**.
- H.1.3 An **official measurer** shall only carry out **certification control** in another country with the prior agreement of the MNA for that country.

### H.2 EQUIPMENT INSPECTION



- H.2.1 If an **equipment inspector** is in any doubt as to the application of, or compliance with, the **class rules**, the question should be referred to the **class rules authority**.

### H.3 MEASUREMENT AXES

- H.3.1 For a **boat**, unless otherwise specified, words such as “fore”, “aft”, “above”, “below”, “height”, “depth”, “length”, “beam”, “freeboard”, “inboard” and “outboard” shall be taken to refer to the **boat** in **measurement trim**. All measurements denoted by these, or similar words, shall be taken parallel to one of the three **major axes**.
- H.3.2 For a component, unless otherwise specified, width, thickness, length etc. shall be measured as appropriate for that component, if relevant without reference to the **major axes**.
- H.3.3 Unless otherwise specified, measurements shall be the shortest distance between the measurement points.
- H.3.4 Unless otherwise specified, longitudinal measurements shall be taken parallel to the longitudinal **major axis**.

## H.4 RIG MEASUREMENT

**H.4.1** Measurements in the length direction shall be taken along the **spar** at the side relevant for the measurement and between sectional planes through the measurement points at 90° to the **spar** at each point.

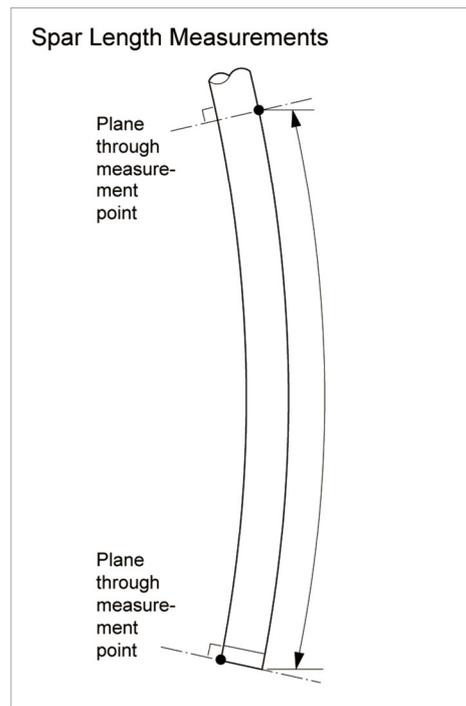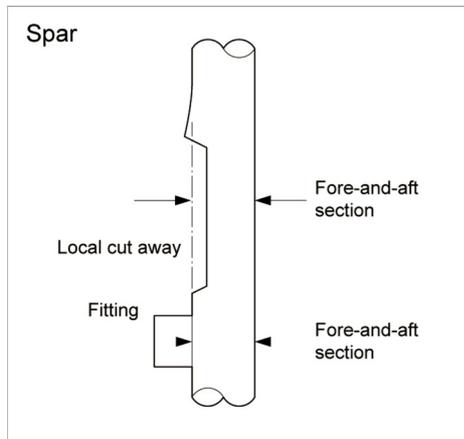


**H.4.2** Fittings, local curvature and local cut away, shall be ignored when measuring a **spar** or dimensions taken to a **spar**.

**H.4.3** No external pressure shall be applied to a **spar** when measuring unless specifically prescribed.


**H.4.4** Adjustable fittings shall be set in the position that gives the greatest value when the measurement is taken.

**H.4.5** **Mast spar deflection** and **boom spar deflection** shall be checked with free ends of **rigging** not supported by the **spar**.

**H.4.6** **Mast tip weight** shall be checked with any **halyards** fully hoisted and **rigging** tied to the **spar** at the **lower limit mark** with lower ends hanging free or resting on the ground.

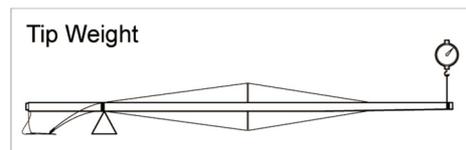

**H.4.7** **Mast centre of gravity height** shall be checked with any **halyards** fully hoisted and **rigging** pulled taut and tied to the **spar** as close to the **lower point** as possible.

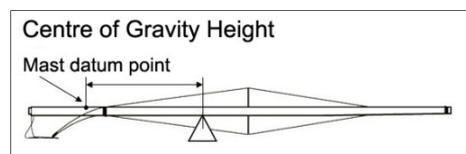

## H.5 SAIL MEASUREMENT

### H.5.1 Condition of the Sail


For measurement the **sail** shall:

- (a) be dry,
- (b) not be attached to **spars** or **rigging**,
- (c) unless the **class rules** prescribe otherwise, have all battens removed,
- (d) have pockets of any type flattened out,
- (e) have just sufficient tension applied to remove wrinkles across the line of the measurement being taken,
- (f) have only one measurement taken at a time and
- (g) be weighed with all **attachments**.

### H.5.2 Hollows in Sail Leeches

Where there is a **sail leech hollow** and a measurement point falls in the hollow:  
 between adjacent **batten pockets**  
 between the **aft head point** and adjacent **batten pocket**  
 between the **clew point** and adjacent **batten pocket**  
 at an **attachment**.

the **sail** shall be flattened out in the area of the **sail edge**, the **sail edge hollow** shall be bridged by a straight line and the shortest distance from the measurement point to the straight line shall be measured. This distance shall be added to the measurement being taken.

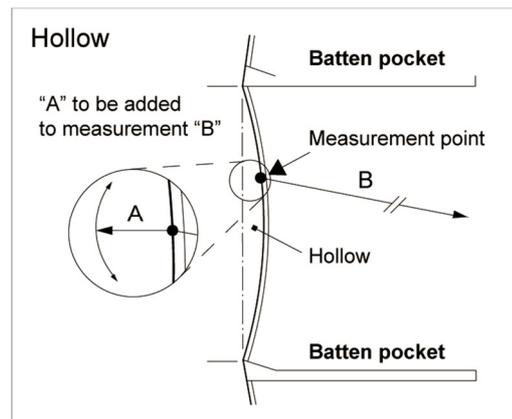

### H.5.3 Excluding Attachments

**Attachments** at a **sail edge**, other than a bolt rope and **tabling**, shall be excluded when measuring.

### H.5.4 Extended as necessary

If there is local curvature and/or irregularity in the **sail edge** leading into a corner point, the extension of the **sail edge** shall be found as follows using a batten as specified in H.5.4(e) :-

- (a) Hold the batten at its very ends with one end approximately where the **corner point** will be and the other end touching the **sail edge** being extended.
- (b) Apply compression only to the batten to produce a uniform curve when required.
- (c) If the batten does not replicate the sail edge shape exactly, move the end of the batten at the **corner** away from **sail** until the longest possible length of the batten touches the **sail edge**.
- (d) Where this technique does not provide a repeatable **corner point**, ERS H.1.2 shall apply.

## PART 3 RULES GOVERNING EQUIPMENT CONTROL AND INSPECTION

- (e) Battens shall be of a specification approved by World Sailing unless otherwise specified in class rules.
- (f) Class Rules may vary ERS H.5.4

### H.6 CHECKING MATERIALS

Unless specifically prescribed by the **class rules**, materials are not subject to **certification control**.

### H.7 BOAT MEASUREMENT

#### H.7.1 Conditions for Weight and Flotation Measurement

The **boat** shall:

- be dry.
- be in compliance with the **class rules**.

Unless otherwise specified in the *rules*, any of the following shall be included:

- rig** including **spinnaker pole(s)**, **whisker poles** and/or jockey pole
- main sheet** and **mizzen sheet**,
- vang,
- inboard engine or outboard engine in stowed position,
- fitted berth cushions on board in their normal positions,
- all permanent fixtures and fittings and items of accommodation.

Unless otherwise specified in the *rules*, any of the following shall be excluded:

- sails**
- fuel, water, **variable ballast** or the content of any other tanks,
- gas bottles
- portable safety equipment
- and all other unfitted or loose equipment.

# APPENDIX 1

---

The following rules in The Racing Rules of Sailing govern equipment, the use of equipment and changes to and compliance with **class rules**:

- 1 Safety
- 40 Personal Flotation Devices
- 42 Propulsion
- 43 Competitor Clothing and Equipment
- 45 Hauling Out; Making Fast; Anchoring
- 47 Limitations on Equipment and Crew
- 48 Fog Signals and Lights; Traffic Separation Schemes
- 49 Crew Position; Lifelines
- 50 Setting and Sheeting Sails
- 51 Movable Ballast
- 52 Manual Power
- 53 Skin Friction
- 54 Forestays and Headsail Tacks
- 55 Trash Disposal
- 64.3 Decisions on Protests Concerning Class Rules
- 77 Identification on Sails
- 78 Compliance with Class Rules; Certificates
- 80 Advertising
- 87 Changes to Class Rules

Note that racing rule 86.1 permits some of these racing rules to be changed by prescriptions of a national authority, sailing instructions or class rules.

The World Sailing Advertising Code (World Sailing Regulation 20) and Appendices G and H of the racing rules are made applicable by racing rules 80, 77 and 43 respectively. That code and those appendices contain rules governing equipment. Certain rules in the International Regulations for Preventing Collisions at Sea (IRPCAS) or applicable government rules are made applicable by racing rule 48, and certain specifications in the World Sailing Offshore Special Regulations are made applicable by racing rule 49.

## APPENDIX 2

---

Abbreviations for primary sail dimensions:

	<b>ERS Rule Reference</b>	<b>Dimension</b>	<b>Abbreviation</b>
<b>Mainsail</b>	G.7.4 (a)	Mainsail Quarter Width	MQW
	G.7.5 (a)	Mainsail Half Width	MHW
	G.7.6 (a)	Mainsail Three Quarter Width	MTW
	G.7.8 (a)	Mainsail Upper Width	MUW
	G.7.9 (a)	Mainsail Top Width	MHB
<b>Headsail</b>	G.7.3	Headsail Luff Length	HLU
	G.7.4 (a)	Headsail Quarter Width	HQW
	G.7.5 (a)	Headsail Half Width	HHW
	G.7.6 (a)	Headsail Three Quarter Width	HTW
	G.7.8 (a)	Headsail Upper Width	HUW
	G.7.9 (a)	Headsail Top Width	HHB
	G.7.11	Headsail Luff Perpendicular	HLP
<b>Spinnaker</b>	G.7.3	Spinnaker Luff Length	SLU
	G.7.2	Spinnaker Leech Length	SLE
	G.7.1	Spinnaker Foot Length	SFL
	G.7.5 (b)	Spinnaker Half Width	SHW

# INDEX OF DEFINITIONS

Defined Term	Rule	Page	Defined Term	Rule	Page
<b>A</b>			Bowsprit Spar Cross Section	F.5.3(b)	25
Aft Head Point	G.5.6	32	Bowsprit Weight	F.5.3(c)	25
Age Date	C.6.5(b)	12	Bulb	E.1.2(e)	14
Attachment Size	G.8.8	37	Bumpkin	F.1.4(c)(ii)	17
Attachments	G.1.4(o)	29	<b>C</b>		
<b>B</b>			Canting Keel	E.1.2(c)	14
Back Lines	F.1.7(b)(x)	19	Centreboard	E.1.2(g)	14
Backstay	F.1.6(b)(ii)	18	Certificate	C.3.3	9
Backstay Height	F.2.3(h)	20	Certification Authority	C.3.1	8
Ballast	C.6.3(f)	11	Certification Mark	C.3.4	9
Bar	F.1.4(d)(vi)	17	Certification Control	C.4.2	9
Batten Pocket	G.1.4(k)	28	Certify/Certification	C.3.2	8
Batten Pocket Length	G.8.1	36	Chafing Patch	G.6.5	34
Batten Pocket Patch	G.6.4	33	Checkstay	F.1.7(b)(iv)	18
Batten Pocket Width	G.8.2	36	Checkstay Height	F.2.3(i)	20
Bilge Keel	E.1.2(b)	14	Class Authority	C.1.1	8
Bilgeboard	E.1.2(i)	15	Class Rules	C.2.1	8
Boat	C.6.1	10	Class Rules Authority	C.2.4	8
Boat Beam	C.6.4(b)	12	Clew	G.3.1	29
Boat Length	C.6.4(a)	11	Clew Diagonal (trilateral sails)	G.7.10(a)	35
Boat Weight	C.6.4(h)	12	Clew Diagonal (other sails)	G.7.10(a) * <sup>1</sup>	39
Body of the Sail	G.1.4(a)	28	Clew Point	G.4.1	30
Boom	F.1.4(b)	17	Closed Class Rules	C.2.2	8
Boom Spar Cross Section	F.3.3(d)	24	Corrector Weight	C.6.3(e)(v)	11
Boom Spar Curvature	F.3.3(b)	23	Crew	C.5.1	10
Boom Spar Deflection	F.3.3(c)	24	Cutter Rig	F.1.2(c)	16
Boom Weight	F.3.3(e)	24	<b>D</b>		
Bowsprit	F.1.4(c)(i)	17	Daggerboard	E.1.2(h)	14
Bowsprit Inner Limit Mark	F.5.2(a)	25	Dart	G.1.4(i)	28
Bowsprit Inner Point	F.5.1(a)	25	Dart Width	G.8.6	37
Bowsprit Outer Limit Mark	F.5.2(b)	25	Diagonals (trilateral sails)	G.7.9	35
Bowsprit Outer Point	F.5.1(b)	25	Double Luff Sail	G.1.4(g)	28
Bowsprit Point Distance	F.5.3(a)	25	Draft	C.6.4(e)	12

## INDEX OF DEFINITIONS

Defined Term	Rule	Page	Defined Term	Rule	Page
<b>E</b>			Head (trilateral sails)	G.3.2	29
Event Limitation Mark	C.4.8	9	Head (other sails)	G.2.5 * <sup>1</sup>	38
External Ballast	C.6.3(e)(ii)	11	Head Length	G.7.12 * <sup>1</sup>	39
Equipment Inspection	C.4.3	9	Head Point	G.4.2	30
Equipment Inspector	C.4.6	9	Headsail	G.1.3(d)	27
<b>F</b>			Headsail Boom	F.1.4(b)(ii)	17
Fin	E.1.2(d)	14	Headsail Hoist Height	F.2.3(k)	21
Flotation Trim	C.6.3(c)	11	Heel Point	F.2.2(b)	19
Flutter Patch	G.6.6	33	Hull	D.1.1	13
Flying Lines	F.1.7(b)(viii)		Hull Appendage	E.1.1	14
Foil	E.1.2(m)	15	Hull Beam	D.3.2	13
Foot	G.2.1	29	Hull Datum Point	D.2.1	13
Foot Irregularity	G.8.3	36	Hull Depth	D.3.3	13
Foot Length	G.7.1	34	Hull Length	D.3.1	13
Foot Median (trilateral sails)	G.7.11	35	Hull Spars	F.1.4(c)	17
Foot Median (other sails)	G.7.11 * <sup>1</sup>	39	Hull Weight	D.4.1	13
Foremast	F.1.4(a)(ii)	16	<b>I</b>		
Foremast Sail	G.1.3(b)	27	In-house Official Measurer	C.4.5	9
Foremast Sail Boom	F.1.4(b)(i)	17	Internal Ballast	C.6.3(e)(i)	11
Forestay	F.1.7(a)(iii)	18	<b>K</b>		
Forestay Height	F.2.3(f)	20	Keel	E.1.2(a)	14
Foretriangle	F.1.8	19	Ketch Rig	F.1.2(d)	16
Foretriangle Area	F.6.1(c)	26	Kite	G.1.3(e)	27
Foretriangle Base	F.6.1(a)	26	Kite-Board	C.6.2(d)	10
Foretriangle Height	F.6.1(b)	26	<b>L</b>		
Front Lines	F.1.7(b)(ix)	18	Laminated Ply	G.1.4(e)	28
Fundamental Measurement	C.4.1	9	Leech	G.2.2	29
<b>G</b>			Leech Length (trilateral sails)	G.7.2	34
Gaff	F.1.4(d)(iii)	17	Leech Length (other sails)	G.7.2 * <sup>1</sup>	39
<b>H</b>			Limit Mark	C.4.7	9
Half Leech Point (trilateral sails)	G.5.2	31	Limit Mark Width	F.1.9(a)(i)	19
Half Leech Point (other sails)	G.5.2 * <sup>1</sup>	38	List Angle	C.6.4(j)	12
Half Luff Point	G.5.7	32	Lower Limit Mark	F.2.1(a)	19
Half Width	G.7.5	34	Lower Point	F.2.2(d)	19
Halyard	F.1.7(b)(i)	18	Lower Point Height	F.2.3(b)	19
			Luff	G.2.3	29
			Luff Length (trilateral sails)	G.7.3	34

## INDEX OF DEFINITIONS

Defined Term	Rule	Page	Defined Term	Rule	Page
Luff Length (other sails)	G.7.3 * <sup>1</sup>	39	<b>P</b>		
Luff Perpendicular	G.7.12	36	Peak	G.3.4 * <sup>1</sup>	38
<b>M</b>			Peak Point	G.4.4 * <sup>1</sup>	38
Mainsail	G.1.3(a)	27	Personal Equipment	C.5.3	10
Mainsail Luff Mast Distance	F.2.3(d)	20	Personal Flotation Device	C.5.4	10
Main Boom	F.1.4(b)(iii)	17	Ply	G.1.4(b)	28
Mainmast	F.1.4(a)(i)	16	Portable Equipment	C.6.5	12
Major Axes	C.6.3(a)	11	Primary Reinforcement	G.6.1	32
Mast	F.1.4(a)	16	<b>Q</b>		
Mast Centre of Gravity Height	F.2.3(s)	22	Quarter Leech Point	G.5.1	31
Mast Datum Point	F.2.2(a)	19	Quarter Luff Point	G.5.6	32
Mast Length	F.2.3(a)	19	Quarter Width	G.7.4	34
Mast Spar Cross Section	F.2.3(o)	22	<b>R</b>		
Mast Spar Curvature	F.2.3(m)	21	Reinforcement Size	G.8.4	36
Mast Spar Deflection	F.2.3(n)	21	Rig	F.1.1	16
Mast Spar Weight	F.2.3(p)	22	Rigging	F.1.6	18
Mast Tip Weight	F.2.3(r)	22	Rigging Point	F.2.3(e)	20
Mast Weight	F.2.3(q)	22	Rudder	E.1.2(j)	15
Maximum Draft	C.6.4(g)	12	Running Backstay	F.1.7(b)(iii)	18
Measurement Trim	C.6.3(b)	11	Running Rigging	F.1.7(b)	18
Mid Foot Point	G.5.12	32	<b>S</b>		
Minimum Draft	C.6.4(f)	12	Sail	G.1.1	27
Mizzen	G.1.3(c)	27	Sail Corners (trilateral sails)	G.3	29
Mizzen Boom	F.1.4(b)(iv)	17	Sail Corners (other sails)	G.3* <sup>1</sup>	38
Mizzen Mast	F.1.4(a)(iii)	16	Sail Edge Shape	G.1.4(p)	29
Monohull	C.6.2(a)	10	Sail Edges (trilateral sails)	G.2	29
Movable Ballast	C.6.3(e)(iii)	11	Sail Edges (other sails)	G.2* <sup>1</sup>	38
Multihull	C.6.2(b)	10	Sail Leech Hollow	G.2.4	29
<b>O</b>			Sail Opening	G.1.4(l)	28
Official Measurer	C.4.4	9	Schooner Rig	F.1.2(f)	16
Open Class Rules	C.2.3	8	Seam	G.1.4(h)	28
Outhaul	F.1.7(b)(v)	18	Seam Width	G.8.5	37
Outer Limit Mark (boom)	F.3.2(a)	23	Secondary Reinforcement	G.6.2	33
Outer Limit Mark (bowsprit)	F.5.2(b)	25	Series Date	C.6.5(a)	12
Outer Point	F.3.1(a)	23	Set Flying	G.1.2	27
Outer Point Distance	F.3.3(a)	23			

## INDEX OF DEFINITIONS

Defined Term	Rule	Page	Defined Term	Rule	Page
Seven-Eighths	G.5.4	31	Stiffening	G.1.4(n)	28
Leech Point (trilateral sails)			<b>T</b>		
Seven-Eighths	G.5.4* <sup>1</sup>	38	Tabling	G.6.3	33
Leech Point (other sails)			Tabling Width	G.8.4(b)	36
Seven-Eighths Luff	G.5.10	32	Tack	G.3.3	29
Point (trilateral sails)			Tack Diagonal	G.7.10(b)	35
Seven-Eighths Luff	G.5.10* <sup>1</sup>	39	Tack Point	G.4.3	31
Point (other sails)			Three-Quarter Leech Point (trilateral sails)	G.5.3	31
Seven-Eighths	G.7.7	34	Three-Quarter Leech Point (other sails)	G.5.3 * <sup>1</sup>	38
Width			Three-Quarter Luff Point	G.5.8	32
Sheer	D.1.3	13	Three-Quarter Width	G.7.6	34
Sheerline	D.1.2	13	Throat	G.3.5 * <sup>1</sup>	38
Sheet	F.1.7(b)(vi)	18	Throat Point	G.4.5 * <sup>1</sup>	38
Shroud	F.1.7(a)(i)	18	Top Point	F.2.2(c)	19
Shroud Height	F.2.3(g)	20	Top Width	G.7.9	35
Single-Ply Sail	G.1.4(f)	28	Trapeze	F.1.7(c)(i)	19
Skeg	E.1.2(f)	14	Trapeze Height	F.2.3(j)	20
Skipper	C.5.2	10	Trim Tab	E.1.2(k)	15
Sloop Rig	F.1.2(b)	16	Tuck	G.1.4(j)	28
Soft Sail	G.1.4(c)	28	Tuck Width	G.8.7	37
Spar	F.1.3	16	<b>U</b>		
Spinnaker Guy	F.1.7(b)(vii)	18	Una Rig	F.1.2(a)	16
Spinnaker Hoist Height	F.2.3(l)	21	Upper Leech Point (trilateral sails)	G.5.5	31
Spinnaker Pole	F.1.4(d)(i)	17	Upper Leech Point (other sails)	G.5.5 * <sup>1</sup>	38
Spinnaker Pole	F.2.4(b)(i)	23	Upper Limit Mark	F.2.1(b)	19
Fitting Height			Upper Luff Point	G.5.11	32
Spinnaker Pole	F.2.4(b)(ii)	23	Upper Point	F.2.2(e)	19
Fitting Projection			Upper Point Height	F.2.3(c)	20
Spinnaker Pole	F.4(a)	25	Upper Width	G.7.8	34
Length			<b>V</b>		
Spinnaker Pole Spar	F.4(b)	25	Variable Ballast	C.6.3(f)(iv)	11
Cross Section			<b>W</b>		
Spinnaker Pole	F.4(c)	25	Waterline	C.6.3(d)	11
Weight			Waterline Length	C.6.4(c)	12
Spreader	F.1.5	18	Waterplane	C.6.3(e)	11
Spreader Height	F.2.4(a)(ii)	22	Wishbone Boom	F.1.4(b)(v)	17
Spreader Length	F.2.4(a)(i)	22			
Sprit	F.1.4(d)(vi)	17			
Standing Rigging	F.1.7(a)	18			
Stay	F.1.7(a)(ii)	18			

## INDEX OF DEFINITIONS

---

<b>Defined Term</b>	<b>Rule</b>	<b>Page</b>
Whisker Pole	F.1.4(d)(ii)	17
Whisker Pole Length	F.4(a)	25
Whisker Pole Spar Cross Section	F.4(b)	25
Whisker Pole Weight	F.4(c)	25
Window	G.1.4(m)	28
Window Area	G.8.10	37
Window Ply Area	G.8.9	37
Windsurfer	C.6.2(c)	10
Wing	E.1.2(l)	15
Wingspan	C.6.4(i)	12
Woven Ply	G.1.4(d)	28
<b>Y</b>		
Yard	F.1.4(d)(v)	17
Yaw Rig	F.1.2(e)	16

\*<sup>1</sup> See Section G, Subsection B – Additions for Other Sails



## **World Sailing**

Ariadne House  
Town Quay  
Southampton  
Hampshire  
SO14 2AQ  
UK

T: +44 (0) 2380 635 111

W: [sailing.org](http://sailing.org)

E: [office@sailing.org](mailto:office@sailing.org)